



Original instructions

Double pallet stacker

EXD-SF 20



0313 0346

first in intralogistics

11638011651 EN - 03/2024 - 08

Address of manufacturer and contact details ▷

STILL GmbH
Berzeliusstraße 10
22113 Hamburg, Germany
Tel. +49 (0) 40 7339-0
Fax: +49 (0) 40 7339-1622
Email: info@still.de
Website: <http://www.still.de>



1 Introduction

Your industrial truck	2
General	2
Copyright and property rights	2
Conformity marking	3
Declaration that reflects the content of the declaration of conformity	4
Identification label	6
List of abbreviations	7
Rules for the operating company of industrial trucks	9
Spare parts list	10
Proper usage	11
Description of use and climatic conditions	11
Unauthorised use	12
Explanation of symbols used	12
Disposing of components and batteries	12

2 Safety

Safety regulations	14
Safety regulations for handling consumables	15
Permissible consumables	15
Oils	15
Hydraulic fluid	16
Battery acid	16
Disposal of consumables	17
Emissions	18
Noise emission values	18
Vibration characteristics for vibrations to which the body is exposed	18
Residual dangers, residual risks	19
Stability	19
Definition of responsible persons	20
Operating company	20
Specialist	20
Drivers	20
Safety tests	22
Regular safety inspection of the truck	22

3 Overviews

Overview	24
General view of the truck	24
General view of the technical compartment	25
Operating and display devices	26
Driver's compartment	26
Display-operating unit	27
Battery charging indicator	28
Electronic key (option)	30
Markings	32
Labels	32
Serial number	33

4 Use

Technical description	36
List of checks prior to start-up	38
Starting up	39
Checks and actions prior to commissioning	41
Checking the anti-crush safety device	41
Checking the emergency shutdown	42
Checking the brake	42
Checking the horn	43
Truck operating instructions	44
Using the display-operating unit	46
Selection buttons	46
Operation of the display unit	46
Driving safety guidelines	51
Driving	52
Defining directions	52
Driving	52
Braking	53
Horn	55
Drive program	55
Ride-on driving	56
Pedestrian driving	58
Combi tiller	58
Using the truck on a ramp	60

Operating the FleetManager™ option	63
Description of the FleetManager option.	63
Commissioning a truck equipped with the FleetManager™ option	64
FleetManager™ option: Colour code for the LEDs	65
Disconnecting a truck equipped with the FleetManager™ option	67
Using the on-board compressor option	69
Transporting loads	70
Load handling safety rules.	70
Grabbing a loading unit	70
Transporting pallets or other containers	71
Reading the capacity plate	72
Progressive stopping of the carriage in the lower position	73
Lift control elements	74
Handling a single load	76
Handling two stacked pallets	80
Driving assistance system: Dynamic Drive Control	83
Description of the Dynamic Drive Control	83
Cold store usage (optional)	84
Before leaving the truck	86
Handling the battery	87
Battery type	87
Order picking	87
Opening and closing the battery hood	88
Charging the battery using an external charger	89
On-board charger	91
Using the on-board charger	92
Adjusting the on-board charger	94
Changing the vertical access battery	95
Changing the side access battery: system 1	95
Changing the side access battery: system 2	101
Handling the truck in an emergency	105
Emergency lowering of the mast	105
Truck towing procedure	106
Handling the truck in specific situations	108
Slinging the truck	108
Lifting the truck	109
Transporting the truck	109
Transporting the truck in the lift	110
Driving on loading bridges	110

5 Maintenance

General maintenance information	112
General	112
Servicing and maintenance personnel training and qualification.	113
Battery maintenance staff	113
Maintenance operations that do not require special training.	113
Ordering spare parts and consumables	113
Safety guidelines for maintenance	114
Servicing and maintenance measures	114
Working on the electrical equipment	114
Safety devices	114
Recommended lubricants	115
Technical data for inspection and maintenance	116
Accessing the technical compartment	117
1000-hour service plan	119
5000-hour maintenance plan	120
10,000-hour service plan	120
Chassis, bodywork and fittings	121
Cleaning the truck	121
General information on battery maintenance	123
Checking the condition of the forks	124
Steering and wheels	125
Cleaning the pinion gear of the steering geared motor	125
Checking the condition of the wheels	126
Stabiliser maintenance	126
Electrical equipment	127
Cleaning and blowing air through the electrical components	127
Checking the battery acid level and electrolyte density	128
Checking the condition of the cables, terminals and battery connector	129
Hydraulic systems	130
Checking the hydraulic system for leaks	130
Checking the hydraulic oil level	130
Checking the controlled stabiliser hydraulic system for leaks	131
Checking the oil level in the controlled stabiliser circuit.	132

Lift mast	133
Cleaning and lubricating the chains.	133
Adjusting the length of the mast chains.	133
Checking the protective screen	134
Storage and decommissioning	135
Storage of truck	135
Permanent Putting Out of Commission (Destruction)	136
 6 Technical specifications	
EXD-SF 20 datasheet	138
EXD-SF 20 mast types	142
Eco-design requirements for electric motors and variable speed drives	142

Introduction

Your industrial truck

Your industrial truck

General

The truck described in these operating instructions corresponds to the applicable standards and safety regulations.

If the truck is to be operated on public roads, it must conform to the existing national regulations for the country in which it is being used. The driving permit must be obtained from the appropriate office.

The truck has been fitted with state-of-the-art technology. Following these operating instructions will allow the truck to be handled safely. By complying with the specifications in these operating instructions, the functionality and the approved features of the truck will be retained.

Get to know the technology, understand it and use it safely - these operating instructions provide the necessary information and help to avoid accidents and to keep the truck ready for operation beyond the warranty period.

Therefore:

- Before commissioning the truck, read the operating instructions and follow the instructions.
- Always follow all of the safety information contained in the operating instructions and on the truck.

Copyright and property rights

This manual - and any excerpts thereof - may not be reproduced, translated or transmitted in any form to third parties without the express written permission of the manufacturer.

Conformity marking

The manufacturer uses the conformity marking to document the conformity of the industrial truck with the relevant directives at the time of placing on the market:

- CE: in the European Union (EU)
- UKCA: in the United Kingdom (UK)
- EAC: in the Eurasian Economic Union

The conformity marking is applied to the nameplate. A declaration of conformity is issued for the EU and UK markets.

An unauthorised structural change or addition to the industrial truck can compromise safety, thus invalidating the declaration of conformity.



Declaration that reflects the content of the declaration of conformity

Declaration that reflects the content of the declaration of conformity

Declaration

STILL GmbH
Berzeliusstraße 10
22113 Hamburg Germany

We declare that the specified machine conforms to the most recent valid version of the directives specified below:

Industrial truck type	corresponding to these operating instructions
Model	corresponding to these operating instructions

- "Machinery Directive 2006/42/EC" ¹⁾
- "Supply of Machinery Safety Regulations 2008, 2008 No. 1597" ²⁾

Personnel authorised to compile the technical documents:

See declaration of conformity

STILL GmbH

¹⁾ For the markets of the European Union, the EU candidate countries, the EFTA States and Switzerland.

²⁾ For the United Kingdom market.

The declaration of conformity document is supplied with the industrial truck. The declaration shown explains the conformity with the provisions of the EC Machinery Directive and the Supply of Machinery Safety Regulation 2008, 2008 No. 1597.

An unauthorised structural change or addition to the industrial truck can compromise safety, thus invalidating the declaration of conformity.

The declaration of conformity must be carefully stored and made available to the responsible authorities if necessary. It must also be

Declaration that reflects the content of the declaration of conformity


handed over to the new owner if the industrial
truck is sold on.

Identification label

Identification label


Version 1

- 1 Identification label
- 2 Manufacturer
- 3 CE symbol (this symbol means that the machine complies with European regulations for industrial trucks)
- 4 Serial number/year
- 5 Unladen weight
- 6 Battery voltage
- 7 Minimum battery weight (for a lithium-ion battery, the weight of the ballast container is included)
- 8 Maximum battery weight
- 9 Nominal capacity of the truck
- 10 Model
- 11 Nominal motor power

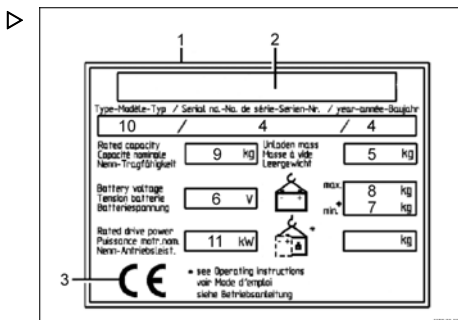

Version 2

- 1 Identification label
- 2 Manufacturer
- 3 Model/Serial number/
Manufacturing year
- 4 Net weight
- 5 Battery maximum weight/
Battery minimum weight
- 6 Ballast weight
- 7 Placeholder for "data-matrix code"
- 8 Conformity marking:
CE marking for EU markets, EU candidate countries, EFTA states and Switzerland
UKCA marking for the UK market
EAC marking for the Eurasian Economic Union market
- 9 Nominal drive power
- 10 Battery voltage
- 11 Nominal load capacity

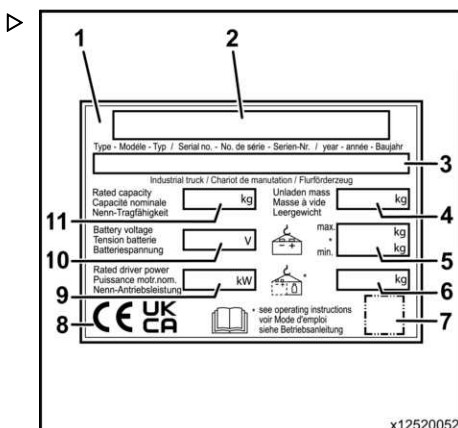

**NOTE**

- Several conformity markings may appear on the nameplate.
- The EAC marking can also be located in the immediate vicinity of the nameplate.

List of abbreviations

This list of abbreviations applies to all types of operating instructions. Not all of the abbreviations that are listed here will necessarily appear in these operating instructions.

Abbreviation	Meaning	Explanation
ArbSchG	Arbeitsschutzgesetz	German implementation of EU occupational health and safety directives
Betr-SichV	Betriebssicherheitsverordnung	German implementation of the EU working equipment directive
BG	Berufsgenossenschaft	German insurance company for the company and employees
BGG	Berufsgenossenschaftlicher Grundsatz	German principles and test specifications for occupational health and safety
BGR	Berufsgenossenschaftliche Regel	German rules and recommendations for occupational health and safety
DGUV	Berufsgenossenschaftliche Vorschrift	German accident prevention regulations
CE	Communauté Européenne	Confirms conformity with product-specific European directives (CE labelling)
CEE	Commission on the Rules for the Approval of the Electrical Equipment	International commission on the rules for the approval of electrical equipment
DC	Direct Current	Direct current
DFÜ	Datenfernübertragung	Remote data transfer
DIN	Deutsches Institut für Normung	German standardisation organisation
EG	European Community	
EN	European standard	
FEM	Fédération Européenne de la Manutention	European Federation of Materials Handling and Storage Equipment
F _{max}	maximum Force	Maximum power
GAA	Gewerbeaufsichtsamt	German authority for monitoring/issuing regulations for worker protection, environmental protection, and consumer protection
GPRS	General Packet Radio Service	Transfer of data packets in wireless networks

List of abbreviations

Abbreviation	Meaning	Explanation
ID no.	Identification number	
ISO	International Organization for Standardization	International standardisation organisation
K _{pA}	Uncertainty of measurement of sound pressure levels	
LAN	Local Area Network	Local area network
LED	Light Emitting Diode	Light emitting diode
L _p	Sound pressure level at the workplace	
L _{pAZ}	Average continuous sound pressure level in the driver's compartment	
LSP	Load centre of gravity	Distance of the centre of gravity of the load from the front face of the fork backs
MAK	Maximum workplace concentration	Maximum permissible air concentrations of a substance at the workplace
Max.	Maximum	Highest value of an amount
Min.	Minimum	Lowest value of an amount
PIN	Personal Identification Number	Personal identification number
PPE	Personal protective equipment	
SE	Super-Elastic	Superelastic tyres (solid rubber tyres)
SIT	Snap-In Tyre	Tyres for simplified assembly, without loose rim parts
StVZO	Straßenverkehrs-Zulassungs-Ordnung	German regulations for approval of vehicles on public roads
TRGS	Technische Regel für Gefahrstoffe	Ordinance on hazardous materials applicable in the Federal Republic of Germany
UKCA	United Kingdom Conformity Assessed	Confirms conformity with the product-specific directives that apply in the United Kingdom (UKCA labelling)
VDE	Verband der Elektrotechnik Elektronik Informationstechnik e. V.	German technical/scientific association
VDI	Verein Deutscher Ingenieure	German technical/scientific association
VDMA	Verband Deutscher Maschinen- und Anlagenbau e. V.	German Mechanical Engineering Industry Association
WLAN	Wireless LAN	Wireless local area network

Rules for the operating company of industrial trucks

In addition to these operating instructions, a code of practice containing additional information for the operating companies of industrial trucks is also available.

This guide provides information for handling industrial trucks:

- Information on how to select suitable industrial trucks for a particular area of application
- Prerequisites for the safe operation of industrial trucks
- Information on the use of industrial trucks
- Information on transport, initial commissioning and storage of industrial trucks

Internet address and QR code



The information can be accessed at any time by pasting the address <https://m.still.de/vdma> in a web browser or by scanning the QR code.



Spare parts list

Spare parts list



The spare parts list can be downloaded by entering the address <https://sparepartlist.still.eu> into a web browser or by scanning the QR code displayed to the side.

When the web page is open, please type in the following password: **Spareparts24!**.

On the next screen, please enter your email address and truck serial number to receive the link by email. Then download the spare parts list.



Proper usage

The truck described in these operating instructions is suitable for lifting, transporting and stacking loads.

The truck should only be used for the purposes for which it was designed, as described in these instructions.

If the truck needs to be used for purposes other than those specified in these instructions, you should first:

- Obtain permission from the manufacturer
- Obtain permission from the competent authorities, if applicable

The purpose of obtaining these permissions in advance is to limit danger as far as possible.

The capacity label specifies the maximum load that can be raised. This limit must not be exceeded.

Description of use and climatic conditions

Normal use

- Indoor and outdoor use.
- Ambient temperature in tropical and Nordic regions ranging from -10°C to 45°C
- Start capability from -10°C to 45°C.
- Maximum start time of 20 seconds
- Use at up to 2000 metres above sea level.

Special use (partly with special measures) for trucks equipped with Gel or Lead batteries

- Use, for example, in the event of abrasive dust (such as AL203), lint, acid, leach, salt and incombustible substances.
- Ambient temperature in tropical regions up to 55 °C.
- Start capability at -25°C.
- Use at up to 3,500 metres above sea level.

Unauthorised use

Unauthorised use

Any danger caused as a result of unauthorised use becomes the responsibility of the operator or driver and not that of the manufacturer.

Use for purposes other than those described in these operating instructions is prohibited.

Transporting people is prohibited.

The forklift truck should not be used in areas where there is a risk of fire, explosion or corrosion, or in areas that are particularly dusty.

Stacking or unstacking is not permissible on inclined surfaces or ramps.

Explanation of symbols used

DANGER

Compulsory procedure that must be followed to avoid life-threatening danger or physical harm.

WARNING

Compulsory procedure that must be followed to avoid injury.

CAUTION

Compulsory procedure that must be followed to avoid damage to and/or destruction of equipment.

NOTE

For technical requirements that require special attention.

ENVIRONMENT NOTE

To prevent environmental damage.

Disposing of components and batteries

The truck is made up of different materials.

If components or batteries must be replaced and scrapped, they must be:

- disposed of
- treated or
- recycled in accordance with regional and national regulations

NOTE

The documentation provided by the battery manufacturer must be observed when disposing of batteries.

ENVIRONMENT NOTE

We recommend working with a waste management company when disposing of components and batteries.

2

Safety

Safety regulations

Safety regulations

These operating instructions, which come with the truck, must be communicated to all those concerned and in particular to personnel responsible for maintenance and driving. The employer must make sure that the forklift operator has properly understood all the safety information.

Please observe the directives and safety regulations attached, in particular:

- Information concerning the use of materials handling trucks
- Regulations concerning traffic lanes and working areas
- Appropriate behaviour, rights and responsibilities of the driver
- Use in particular areas
- Information about the weight and dimensions of pallets or any other container
- Information concerning starting, driving and braking
- Information concerning maintenance and repair

- Regular checks and technical inspections
- Recycling of lubricants, oils and batteries
- Residual risks.

Care is recommended both for the user and the person in charge (employer) with regard to adhering to all safety rules concerning the use of material-handling trucks.

When instructing forklift operators, we recommend the following points are emphasized:

- The features of the truck
- The special accessories
- The specific features of the working environment.

Train the user in how to drive the truck, until it is under proper control.

Then, and only then, proceed to transferring pallets.

Forklift truck stability is guaranteed when the unit is used correctly.

Safety regulations for handling consumables

Permissible consumables

WARNING

Consumables can be dangerous.

It is necessary to follow the safety regulations when handling these substances.

Refer to the maintenance data table for the permissible substances necessary for operation.

Oils



DANGER

Oils are flammable!

- Follow the statutory regulations
- Do not allow oils to come into contact with hot motor parts.
- No smoking, fires or flames!



DANGER

Oils are toxic!

- Avoid contact and consumption
- In case of inhalation of steam or fumes, breathe fresh air immediately.
- After contact with the eyes, rinse thoroughly with water (for at least 10 minutes) and then consult an eye specialist.
- If swallowed, do not induce vomiting. Seek immediate medical attention.



WARNING

Prolonged intensive contact with the skin can result in loss of skin oils and cause irritation.

- Avoid contact and consumption.
- Wear protective gloves!
- After any contact, wash the skin with soap and water and then apply a skin care product.
- Immediately change soaked clothing and shoes.

WARNING

There is a risk of slipping on spilled oil, particularly when combined with water!

- Collect spilled oil immediately using an oil-binding agent and dispose of it in accordance with regulations.



ENVIRONMENT NOTE

Oils are water pollutants!

Always store oil in containers that comply with the applicable regulations.

Avoid spilling oils.

Collect spilt oil immediately using an oil binding agent and dispose of it in accordance with regulations.

Dispose of old oils according to the applicable regulations.

Safety regulations for handling consumables

Hydraulic fluid

**⚠ WARNING**

During operation of the forklift truck, hydraulic fluids are pressurised and are hazardous to your health.

- Do not spill these fluids!
- Follow the statutory regulations
- Do not allow the fluids to come into contact with hot motor parts.
- Do not allow to come into contact with the skin.
- Avoid inhaling the spray
- Penetration of pressurised fluids into the skin is particularly dangerous if these fluids escape at high pressure due to leaks in the hydraulic system. In case of such injury, seek medical advice immediately.
- To avoid injury, use appropriate personal protective equipment (e.g. protective gloves, industrial goggles, skin protection and skin care products).

**ENVIRONMENT NOTE**

Hydraulic fluid is a water-polluting substance!

Always store hydraulic fluid in containers complying with the regulations.

Avoid spilling.

Spilt hydraulic fluid should be removed with oil-binding agents at once and disposed of according to the regulations.

Dispose of old hydraulic fluid according to regulations.

Battery acid

**⚠ WARNING**

Battery acid contains dissolved sulphuric acid. This is toxic.

- Avoid contact and consumption.
- In case of injury, seek medical advice immediately.

**ENVIRONMENT NOTE**

- Dispose of used battery acid in line with the applicable regulations.

**⚠ WARNING**

Battery acid contains dissolved sulphuric acid. This is corrosive.

- When working with battery acid, always wear protective clothing and eye protection.
- Do not allow any acid to get onto the clothing or skin or into the eyes; if this does happen, rinse immediately with plenty of clean water.
- In case of injury, seek medical advice immediately.
- Immediately rinse away spilt battery acid with plenty of water.
- Follow the statutory regulations

Disposal of consumables



ENVIRONMENT NOTE

Materials that have to be disposed of following maintenance, repair and cleaning must be systematically collected and disposed of in accordance with regulations. Observe the national regulations for your country. Work may only be carried out in areas designated for this purpose. Take care to minimise, as far as possible, any impact on the environment.

- Any spillage of fluids such as hydraulic oil, brake fluid or gear lubricant oil must be immediately soaked up with an oil-binding agent.
- The regulations for disposal of used oil are applicable.
- Any spillage of battery acid must be neutralised immediately.

Emissions

Emissions

Noise emission values

Calculated during the test cycle performed in accordance with standard EN 12053.

Acoustic pressure level in the driver's compartment			
Truck	L _{PAZ}	=	67 dB (A)
Uncertainty	K _{PA}	±	2.5 dB (A)



NOTE

Lower or higher noise values may occur when using industrial trucks, e.g. due to the mode of operation, environmental factors and other sources of noise.

Vibration characteristics for vibrations to which the body is exposed

The values were determined according to EN 13059 using trucks with standard equipment according to the datasheet (driving over test course with humps).

Specified characteristics for upper limb vibrations	
Vibration characteristics	< 2.5 m/s ²



NOTE

The vibration characteristics for bodily vibrations cannot be used to determine the actual load level of vibrations during operation. This depends on the operating conditions (state of ground, mode of operation etc.) and should therefore be determined on site, where appropriate. It is mandatory to specify the hand-arm vibrations even where the values do not indicate any hazard, as in this case.

Residual dangers, residual risks

Despite all operational precautions and compliance with standards and rules, the possibility of additional risks when using the truck cannot be entirely excluded.

The truck and all its components comply with the regulations relating to current applicable safety rules.

Persons in the vicinity of the truck must be particularly cautious and react immediately in the event of any malfunction, incident, breakdown etc.

WARNING

Personnel in contact with the truck must be informed of the risks related to using the truck.

These operating instructions draw your attention to the safety rules.

The risks are:

- Escape of consumables due to leaks, ruptured lines and tanks etc.
- Risk of accident when driving over difficult ground such as slopes, soft or irregular surfaces or in poor visibility etc.

- Falling, tripping etc. when moving on the industrial truck, especially in the wet, with leaking consumables or icy surfaces.
- Loss of stability due to the load being unstable or the load slipping etc.
- Risk of fire and explosion due to batteries and electrical voltages.
- Human error - Disregarding safety regulations.

It is important to adjust the speed of the truck depending on the load and ground conditions.

The stability of the truck has been tested to the latest standards. These standards only take account of the static and dynamic tilting forces that can arise during operation that complies with the specifications and operating rules. Risks caused by misuse or incorrect operation that jeopardise the stability cannot be ruled out in extreme situations.

Stability

Forklift truck stability is guaranteed only if the unit is used according to the indicated recommendations.

It is not guaranteed in the event of:

- cornering at excessive speeds
- moving with the load raised
- moving with a load that is protruding to the side (e.g. sideshift),
- turning and driving diagonally across descents or ascents,
- driving on descents or ascents with the load on the downhill side,
- loads that are too wide or too heavy,
- driving with a swinging load,
- ramp edges or steps.

Definition of responsible persons

Definition of responsible persons

Operating company

The operating company is the natural or legal person or group who operates the truck or on whose authority the truck is used.

The operating company must ensure that the truck is only used for its intended purpose and in compliance with the safety guidelines set out in these operating instructions.

The operating company must ensure that all users read and understand the safety information in these instructions.

The operating company is responsible for the scheduling and correct performance of regular safety checks.

It is recommended that these checks comply with national performance specifications.

Specialist

A specialist is deemed to be:

- A person whose experience and technical training has allowed him to develop relevant knowledge of industrial trucks
- A person who is also familiar with national health and safety regulations and generally recognised technical directives and conven-

tions (standards, VDE regulations, technical regulations of other European Union member states or countries that are signatories to the treaty that established the European Economic Area). This expertise allows him to assess the condition of industrial trucks in terms of health and safety

Drivers

This truck may only be driven by suitable persons who are at least 18 years of age, have been trained in driving, have demonstrated their skills in driving and handling loads, and have been specifically designated to drive the truck. Specific knowledge of the truck is also necessary.

Driver rights, duties and rules of behaviour

The driver must be duly informed of his rights and duties.

The driver must be granted the required rights.

The driver must wear protective equipment (protection suit, safety helmet, industrial goggles and protective gloves) that is appropriate for the conditions, the task and the load to be lifted. The driver must also wear safety footwear to be able to drive and brake in complete safety.

The driver must be familiar with the operating instructions and have access to them at all times.

The driver must:

- Have read and understood the operating instructions
- Have familiarised himself with safe operation of the truck
- Be physically and mentally able to drive the truck safely

DANGER

The use of drugs, alcohol or medications that affect reactions impair the ability to drive the truck.

Individuals under the influence of the above-mentioned substances are not permitted to perform work of any kind on or with the truck.

Definition of responsible persons

Prohibition of use by unauthorised persons

The driver is responsible for the truck during working hours. He must not allow unauthorised persons to operate the truck.

When leaving the truck, the driver must secure it against unauthorised use.

Safety tests

Safety tests

Regular safety inspection of the truck

Safety inspection based on time and extraordinary incidents ▸

The operating company (see chapter entitled "Definition of responsible persons") must ensure that the truck is checked by a specialist at least once a year or after noteworthy incidents.

As part of this inspection:

- A full check of the technical condition of the truck in terms of accident safety must be performed
- The truck must be thoroughly checked to detect any damage that may have been caused by improper use
- A test log must be created.

The results of the inspection must be retained until at least a further two inspections have been carried out.

The inspection date is indicated by an adhesive label on the truck.


- Arrange for the service centre to perform periodic safety inspections on the truck.
- Observe the guidelines for tests carried out on the truck in accordance with FEM 4.004.

The operator is responsible for ensuring that any defects are remedied immediately.

- Contact your service centre.

**NOTE**

Observe the regulations in force in your country.

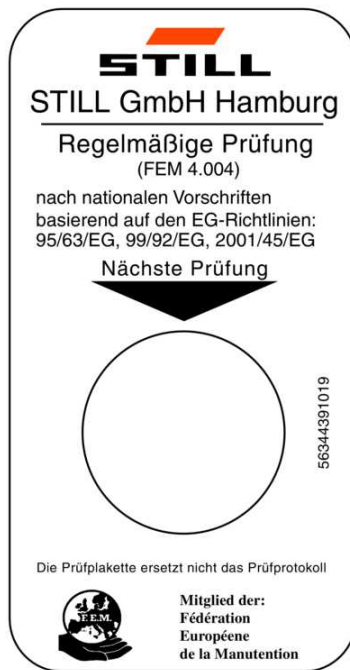


Overviews

Overview

Overview


General view of the truck

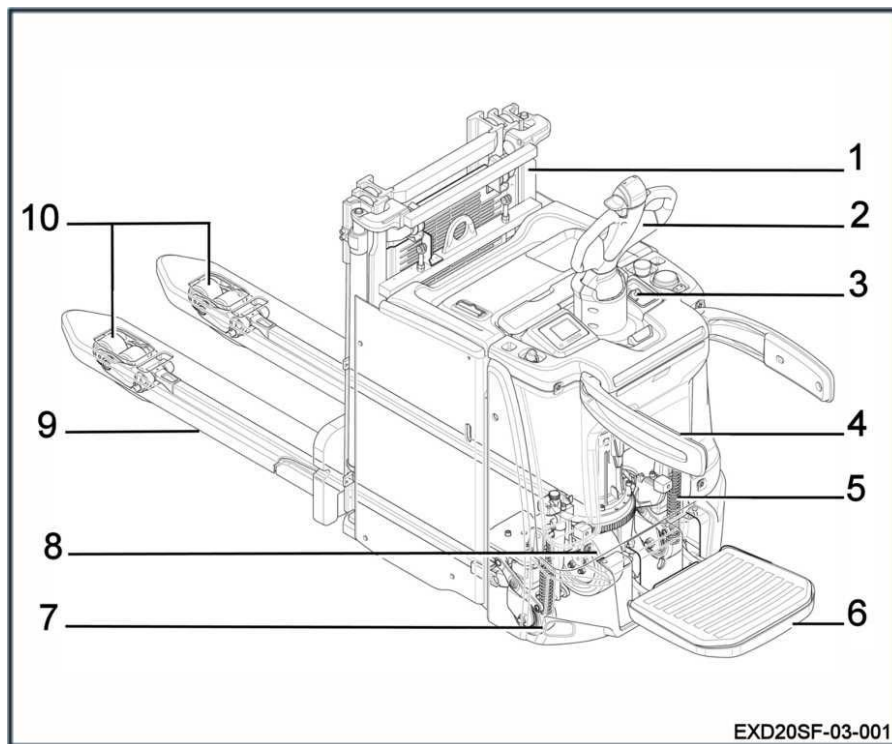

- 1 Mast
- 2 Tiller
- 3 Key switch or electronic key
- 4 Safety protective guardrails
- 5 Stabilisers

- 6 Platform
- 7 Stabiliser wheel
- 8 Drive wheel
- 9 Forks
- 10 Load wheels or bogies

General view of the technical compartment

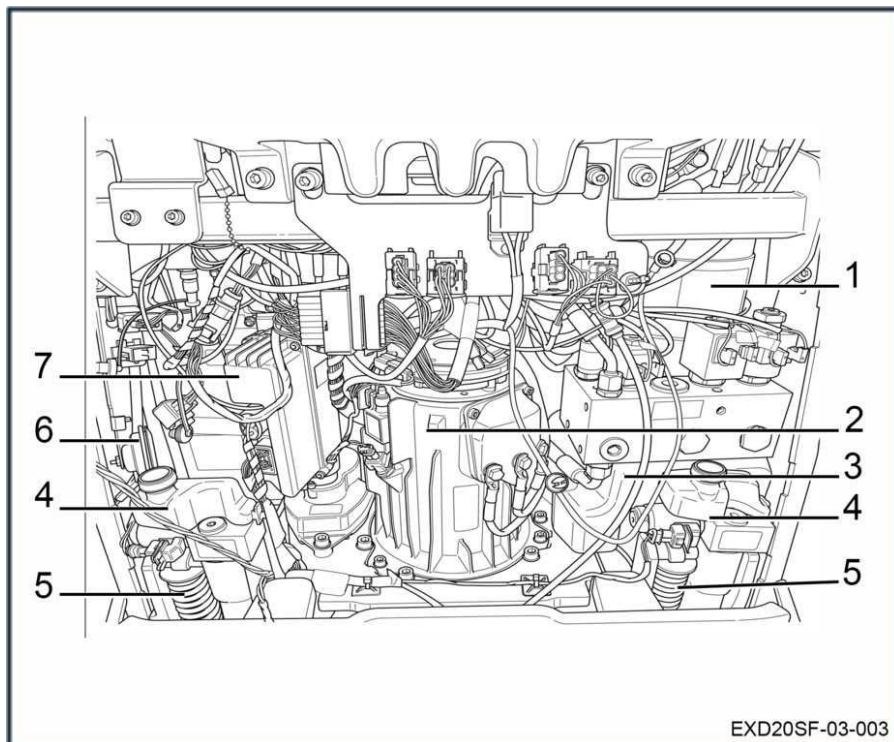


EXD20SF-03-003

- | | | | |
|---|------------------------|---|-----------------------|
| 1 | Pump unit | 5 | Stabilisers |
| 2 | Traction motor | 6 | Horn |
| 3 | Pump unit tank | 7 | ES30-24 steering unit |
| 4 | Servo stabilisers tank | | |

Operating and display devices

Operating and display devices


Driver's compartment

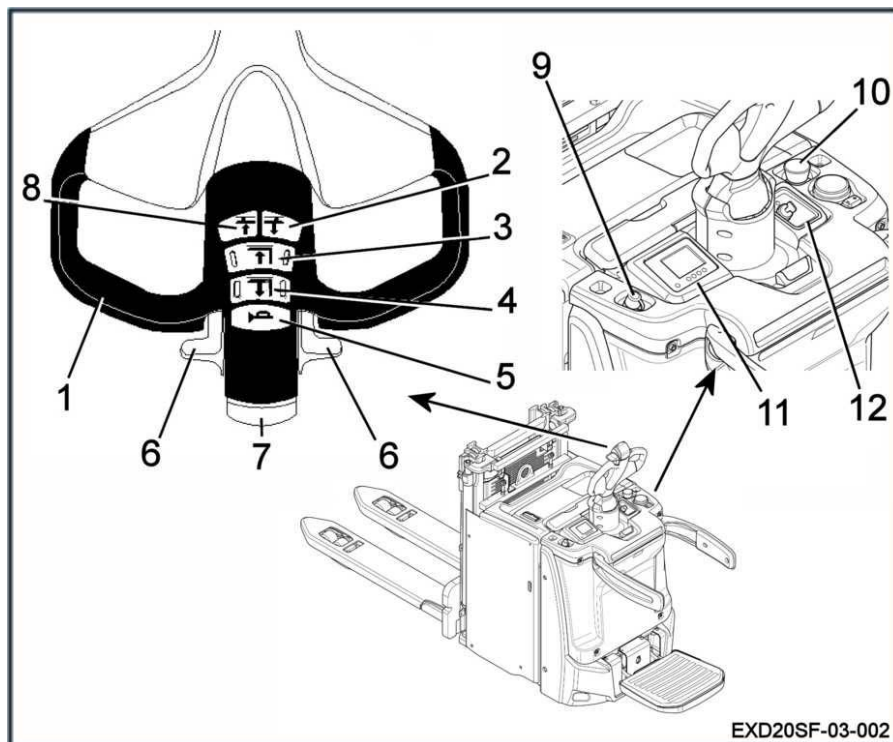

- 1 Handle
- 2 Lifting the load arms
- 3 Proportional lowering of forks
- 4 Proportional lifting of forks
- 5 Horn
- 6 Drive switch

- 7 Anti-crush safety device
- 8 Lowering the load arms
- 9 Diagnostic connector
- 10 Emergency off switch
- 11 Display
- 12 Key switch or electronic key


Display-operating unit

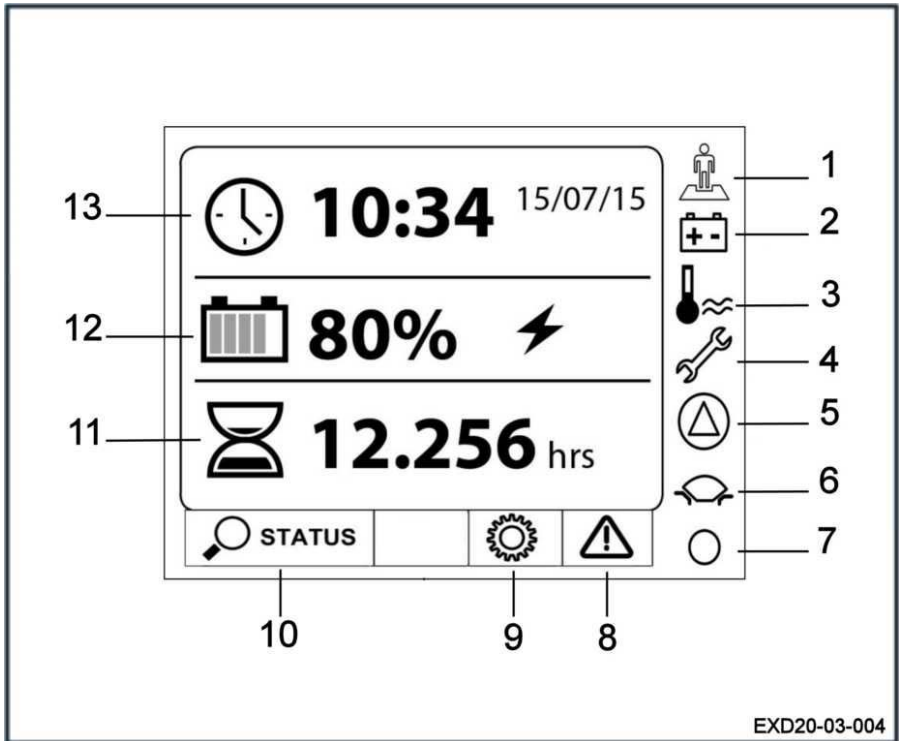

- | | | | |
|---|--|----|--|
| 1 | Operator present indicator light (depending on the model of the truck) | 7 | Activity indicator light |
| 2 | Battery indicator light | 8 | Error Code menu |
| 3 | Temperature indicator light | 9 | Settings menu |
| 4 | Settings indicator light | 10 | Truck status menu |
| 5 | Warning indicator light | 11 | Display of the operating time of the truck |
| 6 | Drive programme indicator light | 12 | Display of the battery charge |
| | | 13 | Display of the date and time |

Operating and display devices

Battery charging indicator

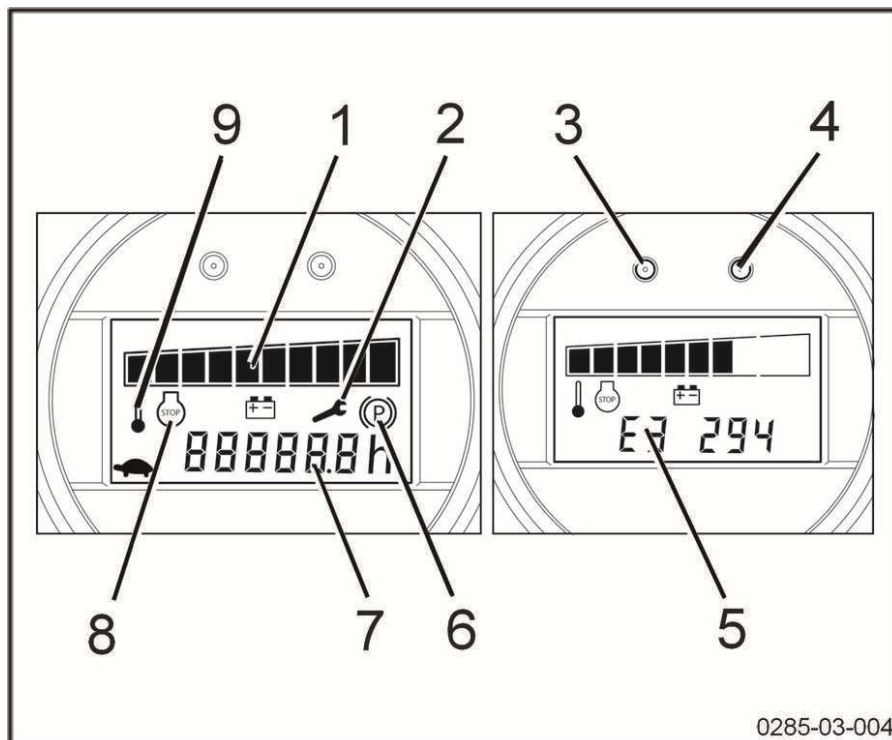


	DESCRIPTION	EXPLANATION	COMMENTS/SCREEN MESSAGES
1	Battery charge level represented by 10 bars	Full charge: 100% Low charge: 10% Discharged: 0%	91% - 100%: 10 bars 1% - 10%: 1 bar 0%: 1 flashing bar (lift function not permitted). NB: To protect the battery, 0% corresponds to max. 80% discharge.
2	Service alarm (red)	1) Flashing: less than 50 hours' truck operation until the next service 2) Constant: Service date overdue	

	DESCRIPTION	EXPLANATION	COMMENTS/SCREEN MESSAGES
3	Red indicator light	Switched on: default or alarm	
4	Green indicator light	Switched off: truck switched off Switched on: truck switched on	
5	Error code	E3 294	These codes will help the service department to decide on the appropriate response from the service engineer.
6	Fault or brake wear (air gap)		Do not operate the truck
7	Hour meter	Indicates the number of operating hours of the machine	- The meter starts running when the machine is switched on and a control is used. - When counting, the dot next to the tenths of an hour flashes. - The hour meter displays hours and tenths of an hour. - When the power supply is disconnected, the hours are stored in the memory.
8	STOP alarm (red)	Miscellaneous problems	Do not operate the truck.
9	T° alarm (red)	Constant: control module overheating	-> Truck is stopped In general, wait a few minutes and then continue.
10	Tortoise symbol	Indicates the slow speed	Concerns traction, lifting and lowering speeds.

Operating and display devices

Electronic key (option)

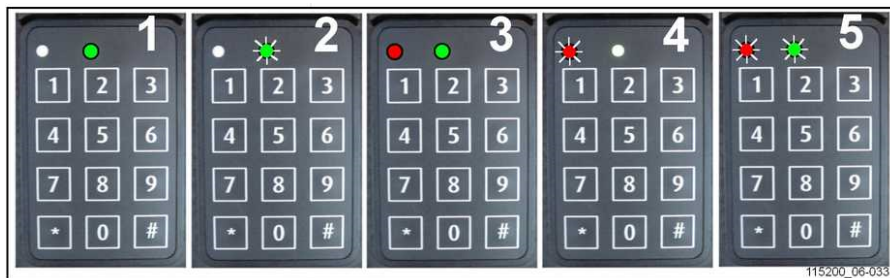

- | | | | |
|---|------------------------------|---|------------------------------------|
| 1 | Switch ON (operating mode) | 4 | Key fault or incorrect code |
| 2 | Switch OFF and awaiting code | 5 | Time delay of automatic switch-off |
| 3 | Programming mode active | | |

Operation	Enter	Status of LEDs	Comments
USE			
ON	*12345# (by default)	○ red off ● continuous green (1) (correct PIN) ● red flashing ○ green off (4) (incorrect PIN)	12345 default PIN
OFF	# (3 seconds)	○ red off ● green flashing (2)	Truck power off


PROGRAMMING (truck switch OFF only (2))			
ADMINISTRATOR CODE ESSENTIAL FOR ALL ELECTRONIC KEY SETTINGS	*00000000# (by default)	● continuous red ● continuous green (3)	Once the LEDs have gone out, the electronic key automatically reverts to "operating mode".
New operator code	*0*45678#	○ red off ● green flashing (2) (code accepted)	Example of new operator code: 45678
Allocating operator codes	*2*54321#	○ red off ● green flashing (2) (code accepted)	*2*: operator reference 10 options from 0 to 9
Deleting operator codes	*2*#	○ red off ● green flashing (2) (deletion accepted)	*2*: operator reference (between 0 and 9)
Modifying administrator codes	*9*12345678#	○ red off ● green flashing (2) (code accepted)	

PROGRAMMING (truck switch OFF only (2))			
Restoring the initial administrator code			To reactivate the default administrator code (00000000), please contact your agent or nearest dealer.
Activating the automatic switch-off	* * 2 * 1 #	• red flashing • green flashing (5) (5 seconds before switch-off)	Power switches off automatically after 10 minutes (600 seconds by default) if the truck is not in use.
Setting the time delay of the automatic switch-off	* * 3 * 6 0 #	○ red off • green flashing (2) (value accepted)	Example: automatically switches off after 1 minute (60 seconds) if not in use. Minimum setting = 10 seconds/maximum = 3000 seconds
Deactivating the automatic switch-off	* * 2 * 0 #	○ red off • green flashing (2) (command accepted)	

Markings

Markings

Labels

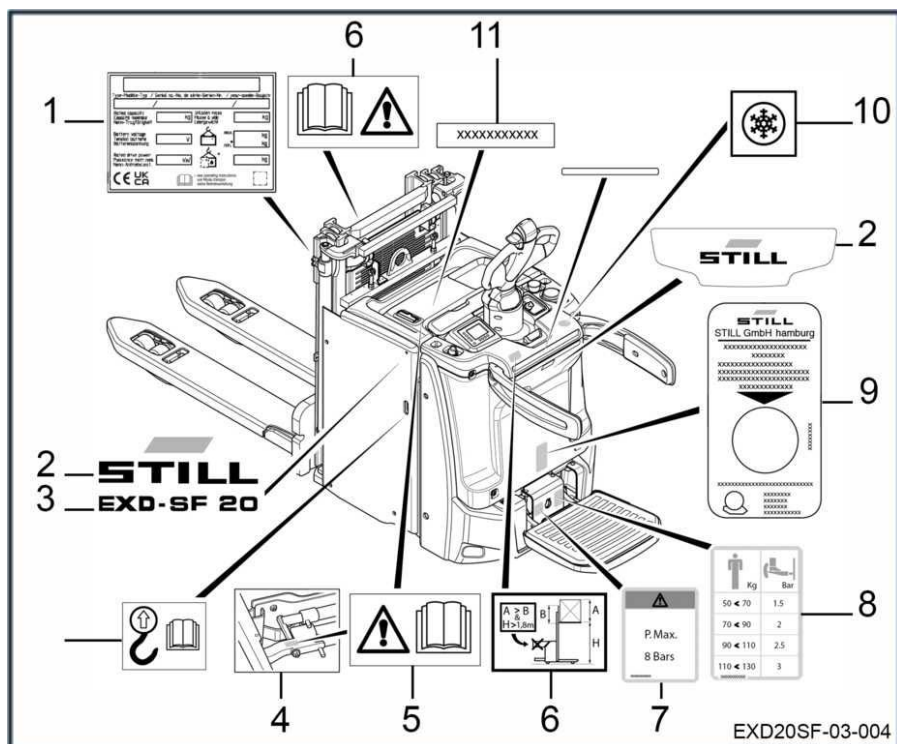

- | | | | |
|---|---|----|---|
| 1 | Identification label | 7 | Label to indicate the pressure of the compressor (platform) |
| 2 | Brand label | 8 | Label to indicate the recommended pressure of the compressor (platform) |
| 3 | Model label | 9 | Next inspection label |
| 4 | Danger instructions label for the battery lock | 10 | Cold store label |
| 5 | Danger instructions label. Consult the operating instructions | 11 | Serial number in the battery compartment |
| 6 | Double pallet stacker label - loading/unloading | | |

Serial number




NOTE

Indicate the serial number for all technical enquiries.

The serial number contains the following information:

- 1 Production location
- 2 Type
- 3 Year of production
- 4 Count number

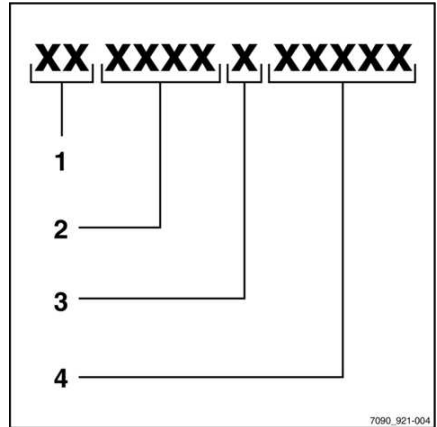

4

Use

Technical description

Technical description

EXD-SF 20 trucks are intended for stacking and double stacking pallets and/or containers. They allow you to transfer loads from one place to another and to pick orders.

Model available:

- EXD-SF 20 with proportional lifting and lowering controls with initial lift

Model offered:

SF model: Ride-on mode.

Features

Speed during ride-on driving:

- 10 km/h unladen.
- 10 km/h laden.

Capacity of the EXD-SF 20 model:

- In pallet truck mode: 2000 kg
- In pallet stacker mode: 1000 kg
- In double pallet stacker mode: 1000 kg on the forks (main lift) and 1000 kg on the load arms (initial lift) if the truck is equipped with controlled stabilisers
- In double pallet stacker mode: 1000 kg on the forks (main lift) and 800 kg on the load arms (initial lift) if the truck is equipped with spring stabilisers

Refer to the capacity plate.

Drive system

The truck drive system comprises:

- 2.3-kW traction motor
- LAC microprocessor controller to control traction and lift
- ES30–24 steering unit
- 2.2-kW pump unit

Batteries

Power is supplied by:

- A lead battery
- A gel battery
- Or a lithium-ion battery (the truck therefore has specific characteristics)

The types of battery removal that are available are as follows:

- Vertical access
- Side access

These different battery types are not available on all models.

Steering

The ES30–24 electric steering offers driving precision and easier manoeuvring.

The truck is equipped with a 0,185 kW asynchronous steering motor.

The steering is controlled by a tiller.

Masts

The mast is lifted using the proportional tiller control.

These masts are equipped with side lift cylinders.

EXD-SF 20 trucks are fitted with:

- S (standard) masts for heights ranging from 1574 to 2424 mm
- D (duplex) masts for heights ranging from 2424 to 2924 mm
- T (triplex) masts for heights of 2138 mm

The cylinders are equipped with stoke-end dampers, which enable the carriage to be lowered gradually.

Braking

The truck is equipped with two brake systems:

- an electric counter-current brake:
- When releasing the drive switch
- By reversing the drive direction
- Controlled by the rear safety button

- An electromagnetic brake:
- Electromagnetic safety brake, controlled by the emergency off switch
- Electromagnetic safety brake, controlled by the upper or lower position of the tiller
- Electromagnetic parking brake, applied when the power supply is cut

Driver's compartment

The tiller groups together control functions such as: steering, proportional lift, forward and reverse traction, initial lift, horn and double throw safety switch.

The various models are equipped with:

- An emergency off switch
- A display

- A diagnostic connector
- Side protection guardrails
- A driver's platform

Equipment available as standard or as additional options:

That can be added to the truck:

- Load backrest
- Load wheels: single wheels or bogies
- Lithium-ion battery
- Central refilling system
- Cold store (-35°C)

List of checks prior to start-up

List of checks prior to start-up

WARNING

Damage or other defects on the forklift truck or attachments (special equipment) can result in accidents.

If damage or other faults are noticed on the truck or attachments (special equipment) during the following inspections, do not use the truck until it has been properly repaired. Do not remove or disable the safety systems and switches. Do not change the pre-set values.

WARNING

Risk of falling!

When working on high-level parts of the truck, do not use truck components for access or to stand on.

- Use suitable access equipment.

Before start-up, ensure that the truck operates correctly.

To do this, perform the following checks:

- Fork arms or other load-carrying equipment should not show any signs of noticeable damage (for example: bending, cracks, significant wear).
- Check that there are no signs of leaking consumables under the truck.
- Do not restrict the field of vision. Ensure the visible area specified by the manufacturer is observed.
- Attachment parts (special equipment) must be properly secured and function according to their operating instructions.

- Damaged or missing stickers must be replaced in compliance with the marking position table.
- The guard grille must be intact and securely mounted.
- The roller guide rails must be coated in a visible layer of grease.
- The wheels must show no signs of defects or heavy wear. They must be mounted correctly.
- Check that there are no foreign objects that could hinder the operation of the wheels and rollers.
- The warning devices (horn etc.) must work.
- The battery cover must be closed.
- Check that the covers are correctly positioned.
- The chains must be in perfect condition and must be evenly and correctly tensioned.
- The operator must be qualified to drive the truck. The operator must be able to reach the controls and operate them (especially the anti-crush device). Do not obstruct access to the controls.

Please inform your supervisor if you notice any defects.

Starting up

NOTE


- Check that the battery hood is closed.
- Check that the battery is locked.
- Check that the battery is connected.
- Check that the battery compartment hood is closed and locked correctly.
- Release the emergency off switch (1) if it has been pressed. ▷
- Turn the key (2). For models equipped with an electronic key or the FleetManager™ option, enter the PIN.

The display (3) switches on. The truck is ready for operation. The brake is automatically disengaged.

- Lower the tiller then reposition it in the rest position to unblock truck use.
- Raise the load arms a few centimetres.

NOTE

Always adjust your speed to suit the route, any dangers and the load. Use the truck on ground that has the correct surface and hardness.

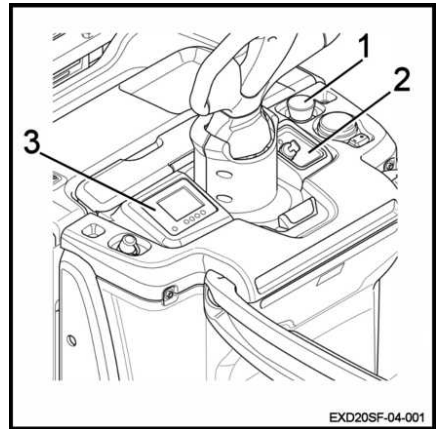

DANGER

Risk of sparks

Using the truck with the battery hood open is prohibited.

WARNING

Risk of accident or loss of load

Driving on slopes steeper than 10% is prohibited due to braking capacity and stability. The load being transported could tip over.


Starting up

- Tilt the tiller in the driving area (3).



NOTE

In areas (1) and (2), the electromagnetic brake is applied and it is not possible to drive the truck.

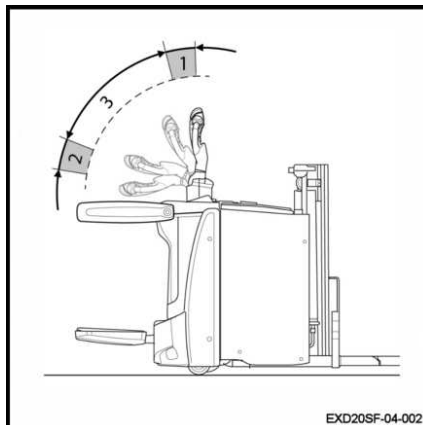

Checks and actions prior to commissioning

Checking the anti-crush safety device

Anti-crush safety function

The machine moves in the opposite direction when the anti-crush button (2) is pressed.

If the truck is being operated in narrow areas (such as in a lift for example), the operator may get stuck against the wall if care is not taken. Without an anti-crush safety device, the tiller could injure the operator.

The truck immediately moves off in the opposite direction when the anti-crush device on the tiller head comes into contact with the driver's body. When the operator moves away from the anti-crush safety device, the machine stops even if a drive direction is selected again.

Normal operation may be resumed after releasing the drive switches.

Checking the anti-crush safety device



WARNING


Ensure that the test zone is free of people and objects, both in front of and behind the truck.

- Move the drive switch (1) or (3) to move the truck towards you.
- Operate the anti-crush safety device (2).

The truck stops and accelerates in the opposite drive direction.

- Release the anti-crush safety button.

The truck stops.

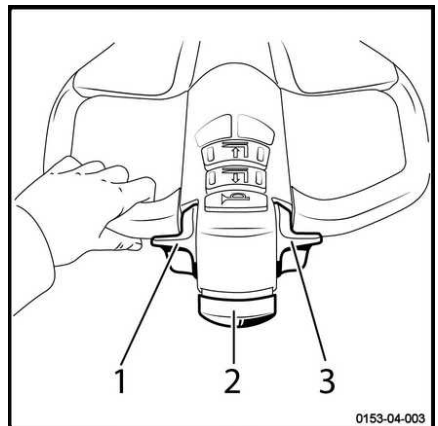


Checks and actions prior to commissioning

Checking the emergency shut-down ▷

To check the operation of the emergency off switch, proceed as follows:

- Start up the truck.
- Drive the truck.
- Press the emergency off switch (1).
- The truck stops immediately
- The truck power supply is cut
- The electrical controls and motors are no longer supplied with power
- Pull the emergency off switch (1).

The functions are available again.

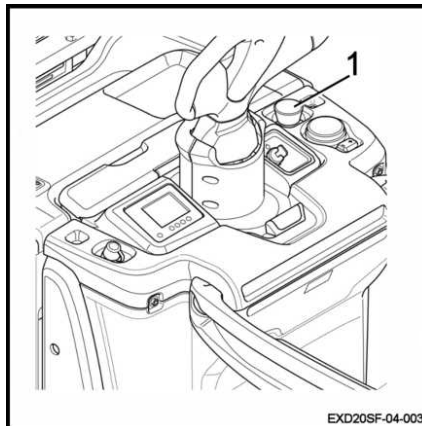

EXD20SF-04-003



NOTE

Ensure that the stabiliser wheels operate correctly. This adjustment influences braking effectiveness.

Checking the brake ▷




NOTE

Perform this check on a flat surface.

- Drive the machine forward.
- Tilt the tiller in areas (1) and (2).

In these two areas, the machine is braked and the drive unit is no longer powered.


Releasing the tiller in the drive area (3) sends the tiller into area (1) and cuts traction.

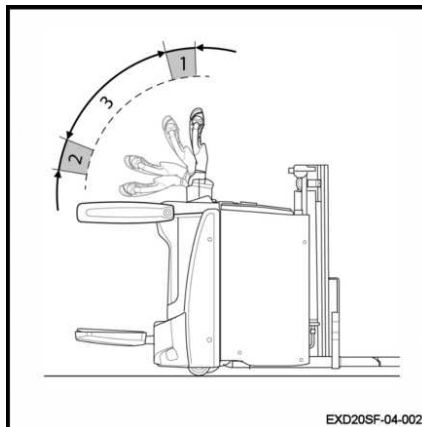

EXD20SF-04-002

Checking the horn

- Press the horn button (5) located on the upper part of the tiller.
- The horn sounds.

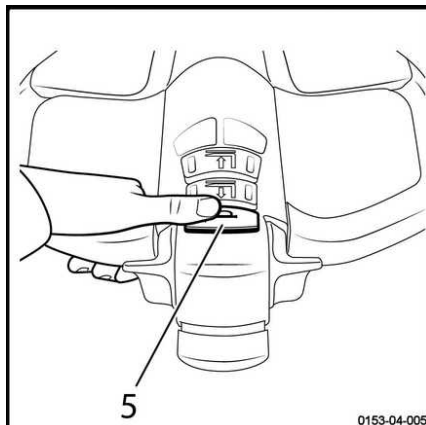

Truck operating instructions

Truck operating instructions

The trucks are designed for indoor and outdoor use in non-hazardous atmospheres. The temperature should be between -10°C and +45°C and the relative humidity of the air less than 95%.



NOTE

A cold store option is available for lower temperatures.

The places where the truck is used must comply with the applicable regulations (condition of the ground, lighting etc.).

The trucks must be used on dry, clean and flat ground.

Before using the truck, it is essential to check the working environment. This check can take the form of visual inspection.

The work area must be clear. The truck's path must be free of obstacles and people.

The operator must be alert to anything that might prevent manoeuvres being carried out safely. The following may create a potential danger:

- A person near the truck
- A person below the forks when they are raised
- The operator must not use an MP3 player or any other electrical equipment that could impair awareness of his/her surroundings
- There must be no signs of oil or grease on the floor

The operator must take care when transporting a load. The load dimensions can interfere with manoeuvres and restrict the field of vision. The speed of the truck must also be reduced as the truck could tip over when braking or cornering.

The loads must be consistent, with a maximum recommended height of 2 m.

For uses other than those shown above, please consult the After-Sales Service Centre.

It is important to use pallets that are in good condition.

Speed must be reduced when moving over obstacles to prevent the truck from becoming unbalanced and vibrations in the operator's arms.

The trucks can drive across ramps and shallow inclines. With an initial lift, they can cross larger obstacles.

⚠ WARNING

Risk of loss of stability

- Always adapt your driving to the ground conditions (uneven surfaces etc.), particularly hazardous working areas and the load.



NOTE

- *To prevent the bottom of the load lift system from scraping the ground, always move the forks to the raised position before setting off*
- *Always switch off the ignition before leaving the truck*
- *The mast protective screen must always be correctly positioned, properly secured and clean*

⚠ WARNING

Risk of damaging the truck

Ensure that the height of the mast is lower than obstacles (racks, doors etc.).

⚠ WARNING

Risk of injury

Always keep your hands on the controls. Never put your hands near moving parts and assemblies without first lowering the load arms to the ground and disconnecting the battery.

For effective protection, safety shoes must be worn.

Do not climb on the hoods of the truck (battery, chassis etc.).

⚠ WARNING

Driving safety guidelines:

- The driver must drive slowly around corners and when entering narrow passageways.
- The driver must always maintain a safe braking distance from vehicles or people in front of him.
- The driver must avoid stopping suddenly, making U-turns too quickly and overtaking in dangerous areas with poor visibility.

⚠ CAUTION

Risk of injury

Before using a side access truck, check that the battery is correctly locked.


Using the display-operating unit

Using the display-operating unit

Selection buttons

The operator selects the menus using the four selection buttons:

- The **Blue Q** button (1) to select Blue Q mode, hare mode or tortoise mode
- The **left arrow** button (2) to scroll left through the drop-down menu
- The **right arrow** button (3) to scroll right through the drop-down menu
- The **confirm** button (4) to confirm the highlighted choice on the screen

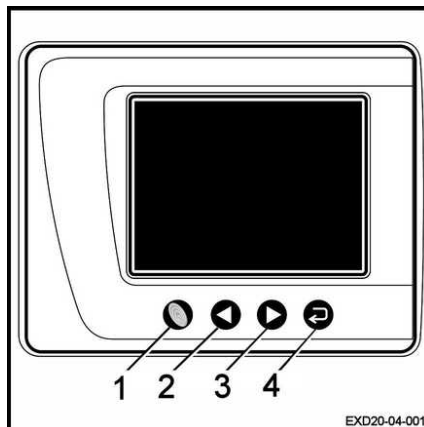

Operation of the display unit

Managing battery charging

The operating unit shows the battery charge level.

The operator can refer to the battery icon (1) or (2).


The number of bars shown indicates the battery charge level.

- From 0 to 20%: 1 bar
- From 21 to 40%: 2 bars
- From 41 to 60 %: 3 bars
- From 61 to 80 %: 4 bars
- From 81 to 100 %: 5 bars

The **battery** light (3) comes on in the event of a deep discharge of the battery or in the event of a fault.

Two distinct warnings may be displayed if the battery charge is insufficient:

- 1) Less than 25% of charge remaining: the (3) and (4) icons flash and an audible beep sounds. A warning message appears at the icon (4) and remains on until the battery is recharged.
- 2) 20% of charge remaining: Three regular beeps sound, lifting is restricted, the (3)

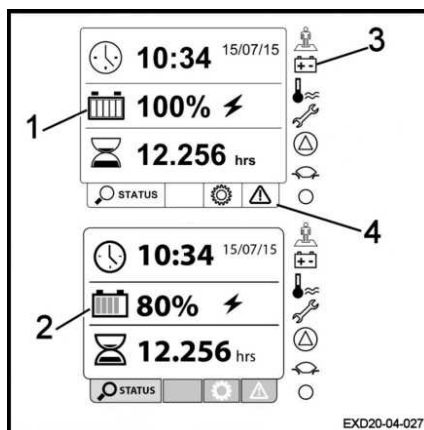


icon flashes and the (4) icon remains on with a new warning message

Operator presence

The **Operator present**(1) indicator light comes on when the operator steps onto the detection platform.

It turns off immediately afterwards.

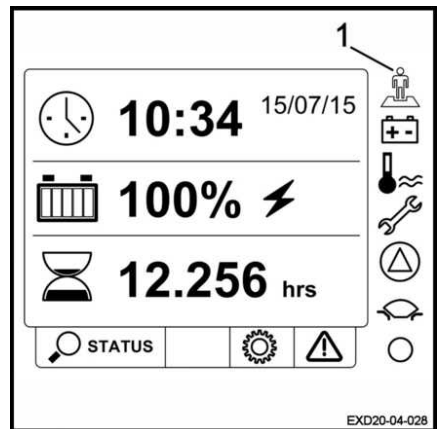

Temperature, settings and warning lights


The **temperature** light (1) comes on in the event of overheating of the traction motor or the controller.

A warning is shown on the display.

The **settings** light (2) comes on to indicate the date of the next maintenance.

A warning is shown on the display.

The **warning** light (3) comes on in the event of a fault in a truck component.

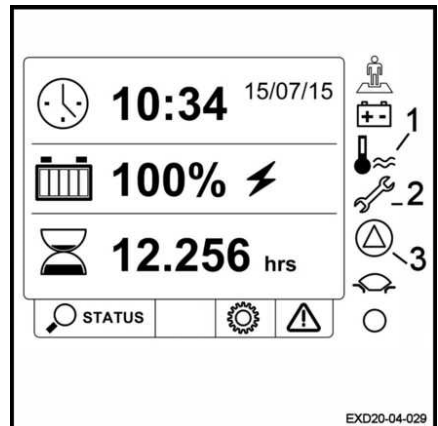

Using the display-operating unit

Drive program


The **drive program** light (1) is permanently illuminated when a travel mode is selected.

There are three different drive modes:

- Tortoise mode (2)
- Hare mode (3)
- Blue Q mode (4)

The icon of the drive mode selected appears on the display.


- Select the desired drive mode using the navigation keys.

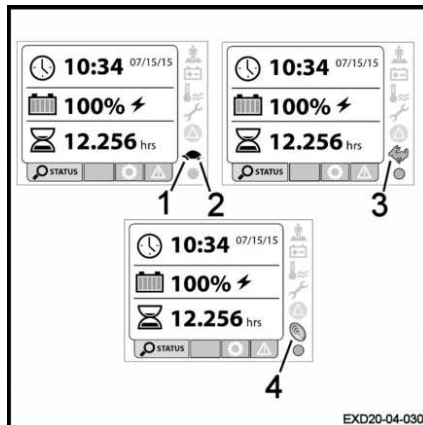

Activity indicator

The **activity indicator** light (1) flashes continuously while the truck is in operation.

When the indicator is off, the display unit is locked or frozen. A warning is shown on the display.

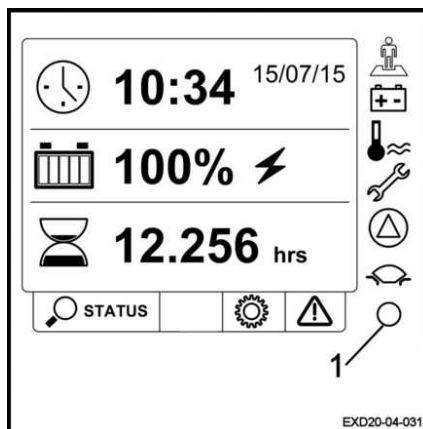

Settings menu


It is possible to access different settings through the Settings menu.

- Select the **Settings** menu (1)

This menu allows access to a drop-down menu (2) consisting of:

- Language
- Unit
- Date format
- Date
- Time
- Adjustment of the Load Management warning sounds
- Adjustment of the contrast
- Adjustment of the brightness

- Select the desired option

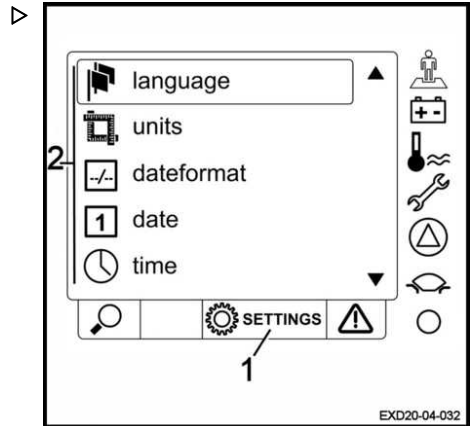


Error codes menu

It is possible to access error messages that are disrupting the operation of the truck.

- Select the **Error messages** menu (1)

The operator can access the error codes. If several codes are affecting the truck, the operator can scroll through several successive displays.

The number of error messages is indicated at the bottom of the display (2).

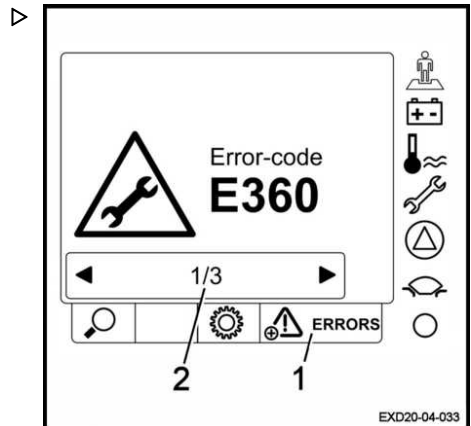

Using the display-operating unit

Start-up screen

In addition to the various menus and lights mentioned above, additional data is available:

- The **truck status** menu (1) displays the truck menu
- The **hourglass** icon (2) indicates the operating time of the truck
- The **clock** icon (3) indicates the time and date



Driving safety guidelines

Behaviour when driving

Operators must obey the same rules within the plant as on the road. They must drive at speeds appropriate for the driving conditions.

Therefore, they must drive slowly:

- When cornering
- Through narrow passageways
- Through swing doors
- In low-visibility areas
- When the roadway is uneven

Operators must always maintain a safe braking distance from vehicles or people in front of them. They must always maintain control of the truck. They must avoid sudden stops, making fast U-turns, overtaking other vehicles in potentially hazardous or low-visibility areas.

Driving the truck while sitting on the dashboard is prohibited. The operator must be resting against the seat.

These trucks are designed to be used as a pallet stacker, double pallet stacker and pallet truck. Therefore:

- Never sit on the dashboard to drive the truck
- The truck must not be used as a stepladder
- The truck is not designed to transport people
- Operators must always stay within the truck clearance
- Stay in the safety area (working area defined by the manufacturer)
- Ensure the stability of the truck and do not exceed its capacity

Use of a telephone or radio with the truck is permitted.

However, do not use these devices when driving as they may distract you.

Take a test drive on an open surface.



NOTE

Drivers must wear safety shoes that fit properly to be able to drive and brake in complete safety.

Driving

Driving

Defining directions


The drive directions on a ride-on double pallet stacker are as follows:

- Forward travel: Fork direction (1)
- Reverse travel: Opposite fork direction (2)

The load is positioned at the front.

**NOTE**

The drive directions are modified when the truck is used in pedestrian mode.

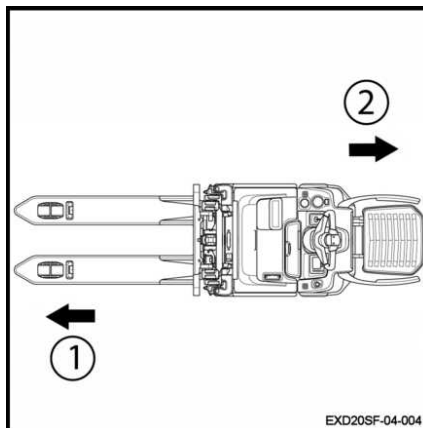


Driving

- Turn the switch key.
- Lower the tiller into zone (3).

**NOTE**

The truck is in the driving position in zone (3). In the lower zone (2) or the upper zone (1), the brake is applied and the traction motor is switched off.

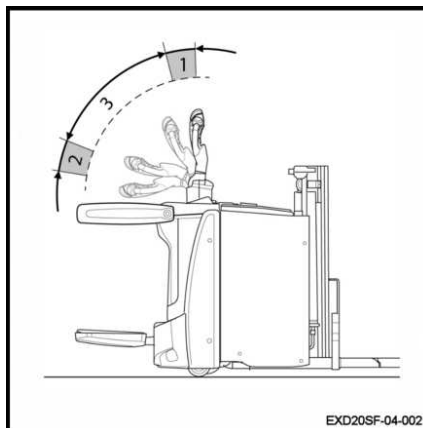**⚠ DANGER****Risk of obstructing the use of the tiller**


Do not adjust the A4-sized support to a height that is too low. This could hinder the forklift operator when driving the truck.

Forward travel

- Press the upper part (2) of the drive switch (3) with your thumb. ▷
- The speed increases with the movement of the drive switch.
- When the drive switch is released, the truck brakes electrically.

Reverse travel

- Press the lower part (1) of the drive switch (3) with your thumb.
- The speed increases with the movement of the drive switch.
- When the drive switch is released, the truck brakes electrically.

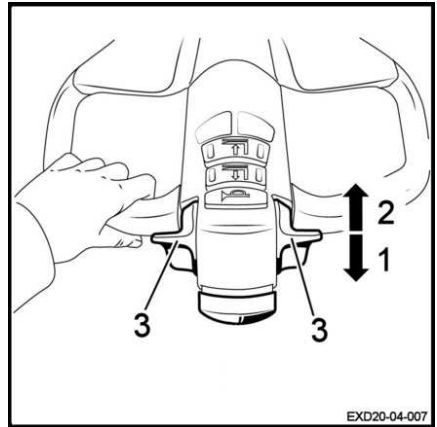

WARNING

Restricted visibility

During reverse travel, visibility may be restricted. Be very careful. Make sure that the path behind is clear before travelling in reverse.

Reversing the drive direction

- Push the drive switch in direction (1) or (2).
- Release the drive switch.
- Operate it progressively in the opposite direction until the required speed is reached.

Braking

WARNING

The quality of the floor surface affects the braking distance of the truck.


This should be taken into consideration when driving.

Driving

Electromagnetic braking

The electromagnetic brake is activated automatically if one of the following conditions is met:

- The tiller is released. It is then brought back to the braking position (1) by a gas spring.
- The tiller is in braking position (2) or (1).
- The drive switch is in the neutral position.
- The power supply is cut off.
- The operator presses the emergency off switch.

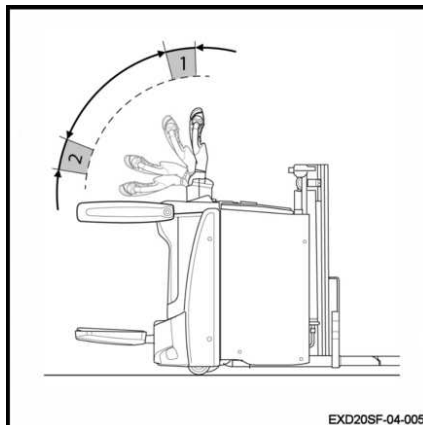**Braking by reversing the drive direction** ▷

Braking can be achieved by reversing the drive direction:


- Move the drive switch (1) or (2) in the opposite direction until the truck stops.

Braking by releasing the drive switch

Braking can be obtained by releasing the drive switch:

- While travelling, completely release the drive switch (1) or (2).

The brake is automatically activated. The truck is immobilised.

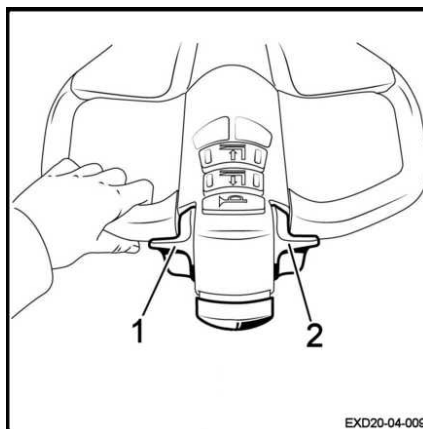


Horn

The horn is positioned on the inner side of the tiller.

It is used:

- On routes where there is poor visibility
- At junctions
- In the event of immediate danger
- Press the button (1) .

The horn sounds.

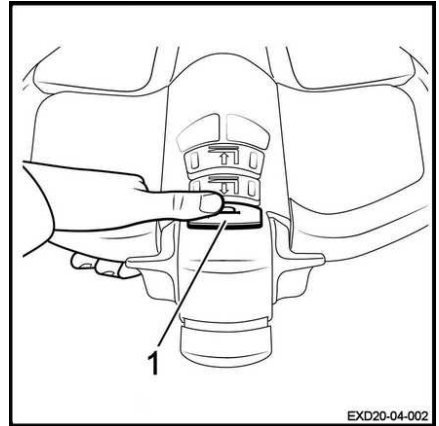

Drive program

The indicator light (1) is on during operation of the truck. The shape of the indicator light indicates the selected program.

The truck is equipped with three different drive programs:

- Hare mode (3)
- BlueQ mode (4)
- Tortoise mode (2)




NOTE

When the operator restarts the truck, the last mode selected is automatically activated.



NOTE

The drive program is instantly changed. If the operator changes mode while driving the truck, he must remain vigilant.

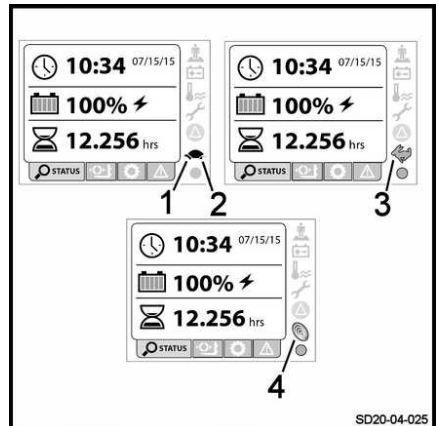

Hare mode

When Hare mode is selected on the screen, the truck operates at its maximum performance.

Driving

Blue Q mode

Selecting Blue Q mode allows you to slightly reduce the performance of the truck:

- The travel speed of the truck is reduced (70% of maximum speed)
- The speed of lifting and lowering the forks is reduced (90% of maximum speed)

This mode allows you to save battery.

Tortoise mode

Selecting Tortoise mode allows you to reduce the performance of the truck:

- The travel speed of the truck is reduced to 6 km/h
- The speed of lifting and lowering the forks is considerably reduced

The different speeds can be adjusted. Contact the After-Sales Service Centre to change these.

Ride-on driving

WARNING

Risk of the operator falling

The side protection guardrails (1) prevent the operator from falling while driving.


Do not climb or sit on the side protection guardrails (1).

- Lower the platform (2).
- Raise the side protection guardrails (1).
- Lock the side protection guardrails in the raised position.
- Step onto the platform.
- Tilt the tiller in the driving area.

DANGER

Risk of falling

Only one operator can stand on the platform at once. The truck is not designed to transport two people.

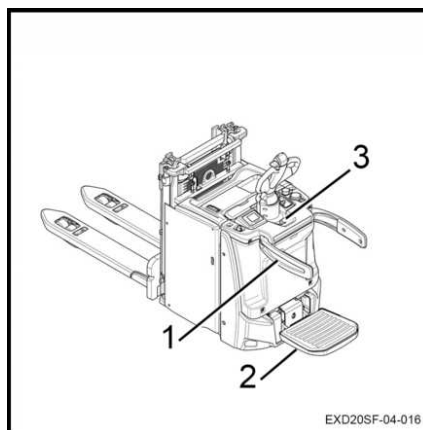

**NOTE**

When the side protection guardrails are folded and the platform is in the lower position, the speed of the truck is limited to 6 km/h.

⚠ WARNING

Driving safety guidelines

The operator must not use the guardrails to push loads sideways.


**NOTE**

To lower the side protection guardrails (1), the tab (3) must be pressed to unlock them.

Precautions for use in stacker and ride-on modes ▷

When the operator uses the truck to stack a load, it is necessary to lower the side protection guardrails when:

- The forks are more than 1.8 metres from the ground (H)
- And the load height (A) is strictly greater than the height of the carriage (B) or the load backrest (B)

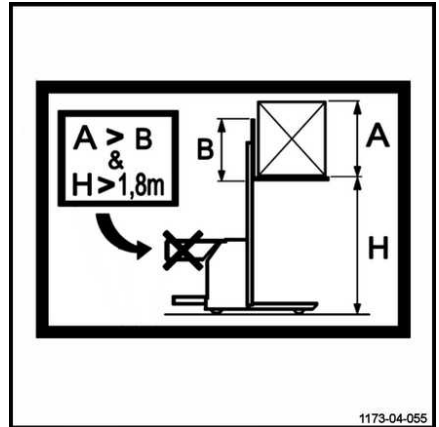

Driving


Pedestrian driving

This double pallet stacker can be used in pedestrian mode to facilitate manoeuvring in narrow spaces.

- Raise the platform (1).
- Push on the tab (2) to unlock the side protection guardrails (3).
- Fold down the side protection guardrails (3).
- Tilt the tiller in the driving area.

**NOTE**

- *Driving in pedestrian mode is possible when the platform is raised and the side protection guardrails are folded down.*
- *The double throw safety switch is activated.*
- *Maximum speed in pedestrian mode is reduced to 4 km/h.*
- *The maximum speed in pedestrian mode is reduced to 6 km/h if the truck is fitted with a combi tiller.*

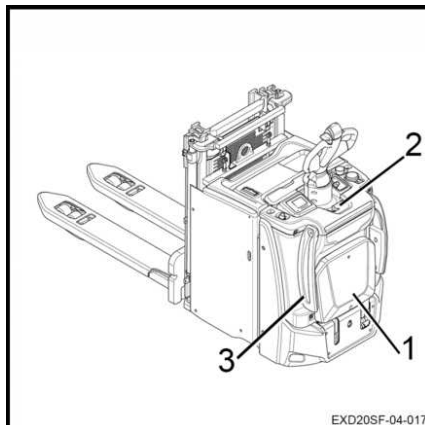


Combi tiller


A combi tiller is available as an option. It increases the safety distance between the truck and the forklift operator for greater safety during use.

Unfolding the combi tiller

- Pull on the lock (1) to unlock the tiller.

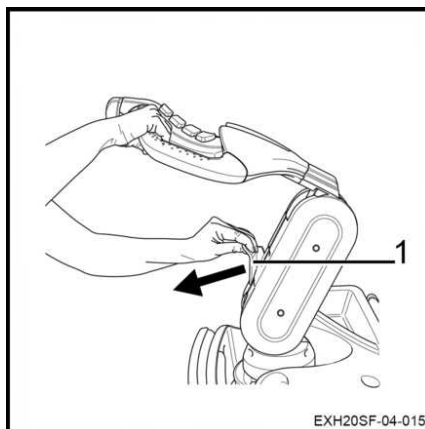


- Pull the handle of the tiller (2) towards you to unfold it.

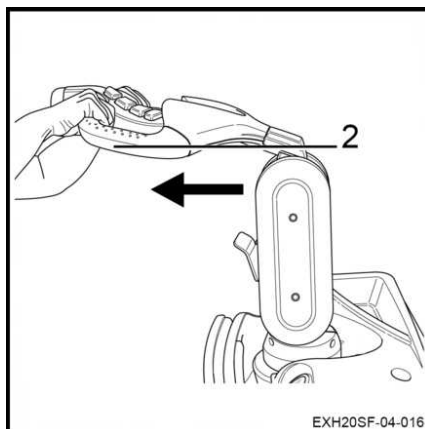

Driving

- Press one of the controls.


The forklift operator can use the truck with an increased safety distance. The combi tiller controls are operated in the same way as the standard tiller controls.

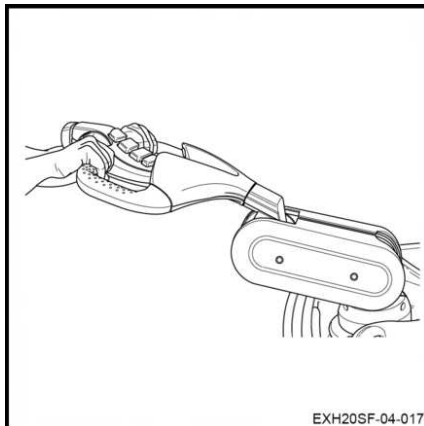

Folding the combi tiller

- Push on the tiller handles (3) to fold it.

The forklift operator uses the truck in a more standard configuration.

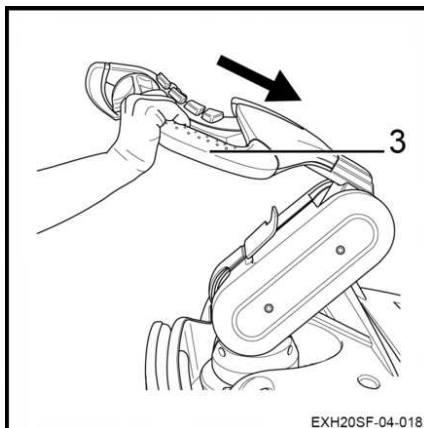

Using the truck on a ramp



NOTE

Incorrect use of the truck on a ramp is not recommended. It places particular stress on the traction motor, brakes and battery.

Ramps must always be approached with caution:

- Never attempt a slope with a gradient that is greater than that specified in the truck's datasheet.
- Make sure that the ground is clean and has a non-slip surface and that the route is clear.


Travelling up slopes

Always travel forwards when going up a slope.

When the truck is used in pedestrian mode, always travel in reverse when going up a slope.

The load faces uphill.

Without a load, we recommend that you go up a slope forwards.

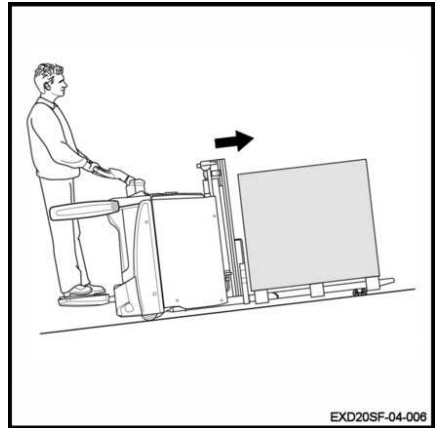

Travelling down slopes

Always travel in reverse when going down a slope.


When the truck is used in pedestrian mode, always travel forwards when going down a slope.

The load faces uphill.

Without a load, we recommend that you go down a slope forwards.

Avoid maximum speed when travelling downhill.

In all cases, you must travel at a very low speed and brake gradually.

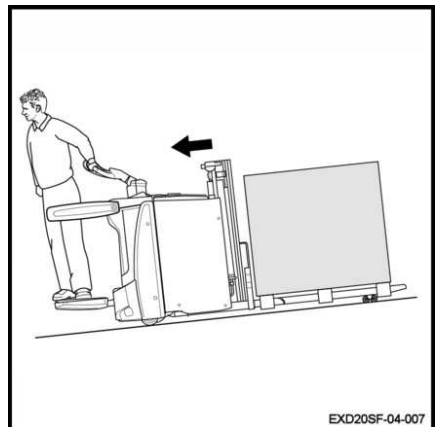

Driving

DANGER

Danger of death and/or risk of serious damage to equipment

Never park the truck on a slope. Never make a U-turn or take a short cut on a slope.

On a slope, the forklift operator must drive more slowly.

WARNING

Risk of serious injury and/or serious damage to equipment

Driving on slopes steeper than 10% is prohibited due to braking capacity and stability. The load being transported could tip over.

Starting on a ramp

Proceed as follows:

- Move the drive switch in the required direction.
- Release the drive switch to apply the parking brake.

Operating the FleetManager™ option

Description of the FleetManager option

The FleetManager option allows you to control access to the truck. The option is a fleet management system.

You can access the system:

- Either by using a keypad
- Or by using a reading device for a transponder or an RFID card

The fleet manager sets the access details via the web interface. This affects the transponder cards or PIN codes for the corresponding trucks. It is possible to change the amount of time for which the access authorisation is valid.

Software is also available.

Additional options:

- Shock sensor
- Tools for wireless data management:
 - ▶ GSM⁽²⁾GPRS⁽¹⁾ module with antenna

The options available on the truck are:

- Access control
- Access control and shock sensor
- Access control and GPRS module
- Access control, shock sensor and GPRS module

(1) GPRS: General Packet Radio Service

(2) GSM: Global System for Mobile Communication

Shock sensor

This sensor allows you to record the shocks received by the truck.

If the truck receives a shock, it is possible to configure a speed reduction.

The fleet manager is the only person who is able to change certain parameters.



NOTE

Replace the sensor if it is faulty.

GSMGPRS module

The module consists of a GSM modem and an antenna.

The module allows you to:

- Access truck information remotely
- Use geolocation

The data is stored on a server.

Data is transmitted by Bluetooth (default) or by GSM module (optional).

Operating the FleetManager™ option

Commissioning a truck equipped with the FleetManager™ option

Commissioning a truck equipped with a keypad or an electronic key ▶

- Turn the switch key to start the truck.
- Enter the PIN code on the keypad. The PIN code consists of five to eight digits.


By default, no PIN code is given as a factory setting.

If the PIN code is correct, the LED (1) is not lit. The LED (2) flashes slowly at two-second intervals (green colour).

No acoustic signal sounds.

- Press the Enter key (3) to confirm.

The truck is now ready for use.

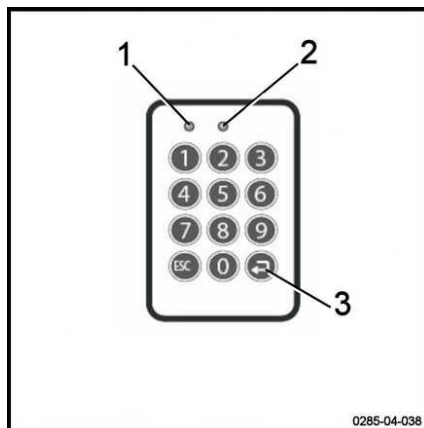

0285-04-038



NOTE

In the configuration, the fleet manager can specify that the operator must enter a preliminary code when logging in. The operator can then assess the state of the truck.


Commissioning a truck equipped with an RFID reading device ▶

- Turn the switch key to start the truck.
- Place the RFID transponder card or the RFID transponder (4) in front of the reading device (3).

If the card is correct, the LED (1) is not lit. The LED (2) flashes slowly at two-second intervals (green colour).

Two acoustic signals sound.

The truck is now ready for use.

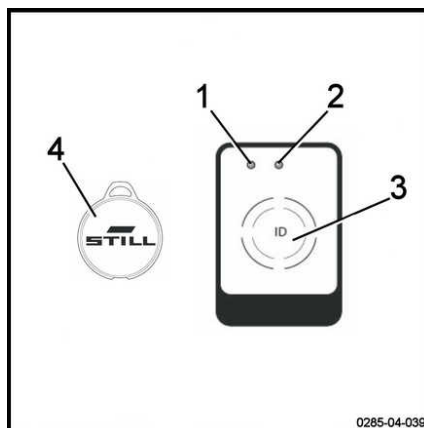

0285-04-039

FleetManager™ option: Colour code for the LEDs

The LEDs can have different statuses and different colours. Below is the list of the most common messages and their meanings.

Malfunction		Signal transmitter	Cause	Solution
LED status				
LED 1	LED 2			
Lit continuously Red colour	Off	A long acoustic signal sounds	Reading device variant: no valid access authorisation	Generate a valid access authorisation using the interface
			Keypad variant: no valid access authorisation for the PIN code entered	
			Keypad variant: PIN code entered incorrect or not confirmed using the Enter key	Re-enter the PIN code
Lit continuously Red colour	Flashes once Green colour	A long acoustic signal sounds	The operator has been granted access authorisation. But the period of validity has expired.	Use the interface to enter a new period of validity
			The date of the truck is incorrect	Update the date of the truck
Flashes quickly Yellow colour	Lit continuously Green colour		Memory is 80% full	Clear the memory
Flashes quickly Red colour	Flashes quickly Red colour	A long acoustic signal sounds upon activation	There are several possible causes: - Reading device or keypad not accessible - GPRS module not accessible - Built-in rechargeable battery flat - Memory full	Contact the After-Sales Service Centre

Operating the FleetManager™ option

Malfunction		Signal transmitter	Cause	Solution
LED status				
LED 1	LED 2			
Flashes quickly Red colour	Lit continuously Green colour		A shock has occurred	Reset the shock
Flashes quickly Blue colour	Off		The truck is connected via a Bluetooth link. The operating data is being read. The reading process can take up to five minutes.	The truck is switched on but is not moving. Wait for all of the relevant data to be read. As soon as the LEDs change to a different status, resume work.

Disconnecting a truck equipped with the FleetManager™ option

NOTE

Operators must not log off intentionally while driving.

WARNING

Access to the truck must be disabled.

Unauthorised users are not allowed to use the truck.

Disconnecting a truck equipped with a keypad or electronic key

- Park the truck in a safe place.
- Press the button (3) to log off. Keep the button pressed in.


No LEDs light up. A long acoustic signal sounds.

The LED (1) lights up for a second (red colour). The LED (2) is not lit. A long acoustic signal sounds.

The LED (1) is no longer lit. The LED (2) flashes slowly at two-second intervals (green colour). No acoustic signal sounds.

The truck is disabled.

- Turn the switch key to the off position to switch the truck off completely.

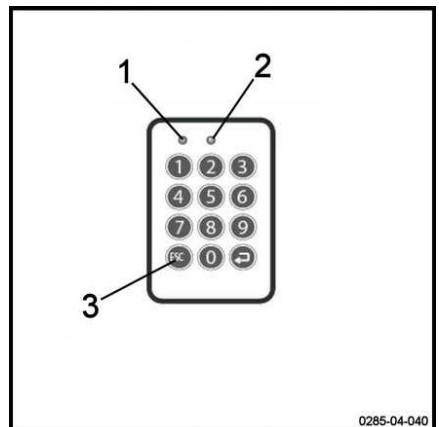

Operating the FleetManager™ option

Disconnecting a truck equipped with an RFID reading device ▶


- Park the truck in a safe place.
- Briefly place the RFID card or the RFID transponder (4) in front of the reading device (3).

The LED (1) lights up for a second (red colour). The LED (2) is not lit. A long acoustic signal sounds.

The LED (1) is no longer lit. The LED (2) flashes slowly at two-second intervals (green colour). No acoustic signal sounds.

The truck is disabled.

- Turn the switch key to the off position to switch the truck off completely.

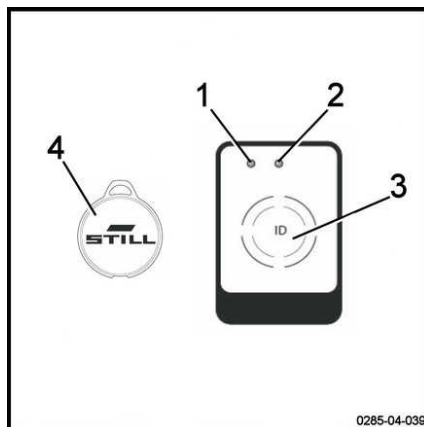

Using the on-board compressor option ▷

The on-board compressor option allows you to automatically pressurise the shock-absorbing platform bellows.


This shock-absorbing platform reduces the vibrations felt within the truck while driving. It can be adjusted in accordance with the weight of the forklift operator.

To increase the shock absorbency:

- Press the + button (1) located on the dashboard.

To decrease the shock absorbency:

- Press the - button (2) located on the dashboard.

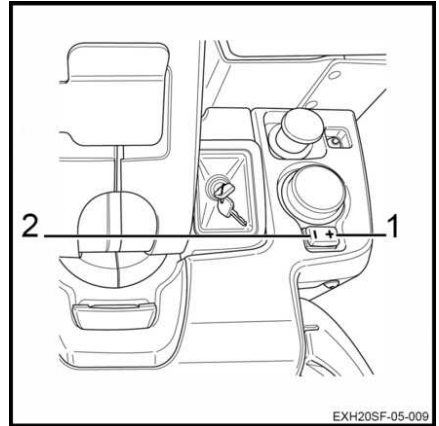

Transporting loads

Transporting loads


Load handling safety rules

⚠ WARNING

Carefully observe the following instructions before picking up loads. Never touch or stand on moving parts of the truck (e.g. lifting device, pushing devices, work installations or devices for picking up loads).

⚠ WARNING

Take care not to trap hands or feet when operating the truck.

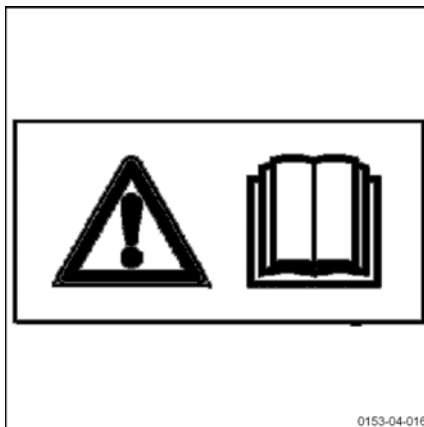


Grabbing a loading unit



Watch out for the following elements:

- the load must be well-balanced and centred correctly between the fork arms
- the fork arms must be sufficiently slid underneath the load to guarantee stability.

The load must not protrude too far over the fork arms, nor should the fork arms protrude too far out from the load.


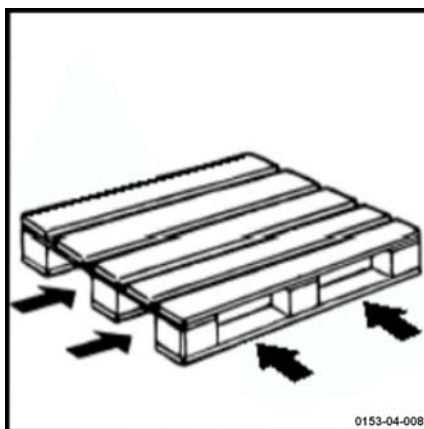


Transporting pallets or other containers

As a general rule, loading units must be transported one by one (e.g. pallets). Transporting several loading units at a time is only authorised:

- when the safety preconditions are fulfilled.
- by order of the monitoring agent.

The forklift operator must ensure that the loading unit is properly packaged. He must only move loading units that have been carefully prepared and that meet the safety requirements.

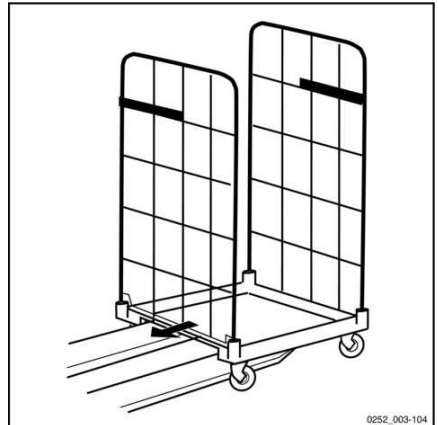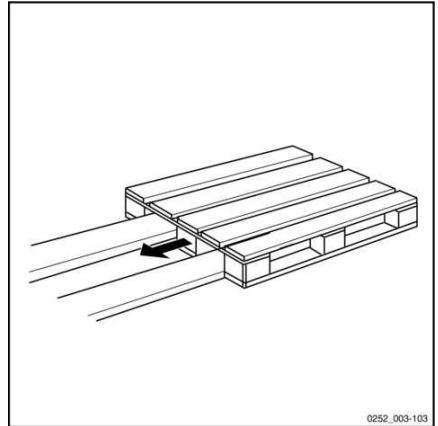

Transporting loads

Reading the capacity plate

⚠ CAUTION


Risk of loss of control

Before picking up a load, make sure that its weight does not exceed the lifting capacity of the machine.

Refer to the nominal capacity specified on the truck's capacity plate (1).

The values shown correspond to compact, homogeneous loads. They must not be exceeded. If they are exceeded, the stability of the truck and the resistance of the mast and the chassis are no longer guaranteed.

The distance of the load centre of gravity from the back of the fork and the lift height determine the maximum load to be lifted. Check that the pallet is in good condition.

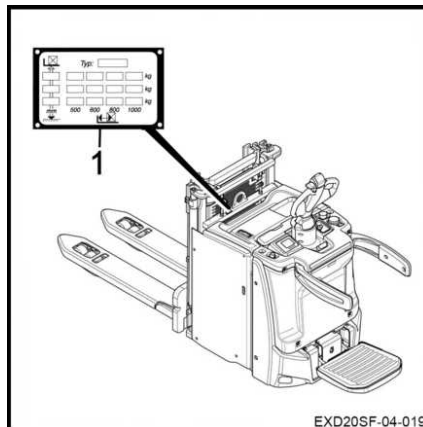

Capacity of the EXD-SF 20 model

In pallet truck mode: 2000 kg

In pallet stacker mode: 1000 kg


In double pallet stacker mode: 1000 kg on the forks (main lift) and 1000 kg on the load arms (initial lift) if the truck is equipped with controlled stabilisers

In double pallet stacker mode: 1000 kg on the forks (main lift) and 800 kg on the load arms (initial lift) if the truck is equipped with spring stabilisers

Reading the capacity plate

Example with an EXD-SF 20 fitted with a 1844-mm duplex mast:

- 1: Maximum lift height: 1930 mm
- 2: Maximum mast capacity: 1200 kg with a height of 1930 mm (centre of gravity: 400 mm)
- 3: Maximum mast capacity: 1200 kg with a height of 1930 mm (centre of gravity: 500 mm)
- 4: Maximum mast capacity: 1200 kg with a height of 1930 mm (centre of gravity: 600 mm)
- 5: Lift height: 1930 mm
- 6: Mast capacity: 1200 kg with a height of 1930 mm (centre of gravity: 400 mm)
- 7: Mast capacity: 1200 kg with a height of 1930 mm (centre of gravity: 500 mm)

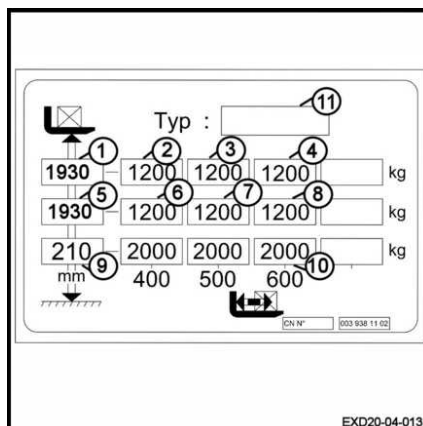


- 8: Mast capacity: 1200 kg with a height of 1930 mm (centre of gravity: 600 mm)
- 9: Maximum lift height: 210 mm with 2000 kg in pallet truck mode
- 10: Maximum capacity in pallet truck mode: 2000 kg with a height of 210 mm
- 11: Model

Progressive stopping of the carriage in the lower position ▷

A detector (1) that senses when the position of the forks is 30 cm from the bottom part of the mast triggers an automatic slowing of the lowering action. This detector prevents a violent impact at the end of travel.

- Push the fork lowering control until the carriage is fully lowered.

The progressive shutoff device for the carriage prevents the buffer from being hit at the end of travel.

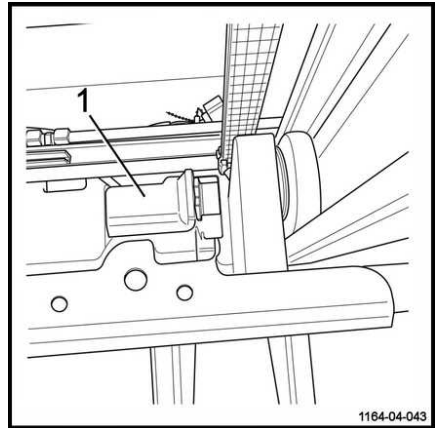

Transporting loads

Lift control elements

WARNING

Appropriate use of the equipment

Only use the lifting device and the accessories for the work for which they are intended.

The operator must receive instruction on the operation of the load lift system.

WARNING

Risk of injury

The safety instructions must be strictly adhered to.

Do not touch or stand on moving parts (e.g. lifting device, pushing devices, work installations, load lifting devices).

WARNING

Risk of injury

Never put your hands near the load lift system.

DANGER

Risk of accident

The mast protective screen must always be in place, correctly fixed and clean to provide good visibility for the operator.

For safety reasons, the lift and traction functions are inhibited when the tiller is in the rest position.

The truck has two lift systems.

Raising/lowering the mast

Lifting the mast:

- Press button (2).

The forks are raised.

Lowering the mast:

- Press button (1).


The forks are lowered.

When the lifting control (1) is released, the forks stabilise at the required height.



NOTE

A groove (3) is present on each side of the button. This helps you to feel the button and to identify it even if there is not much light.

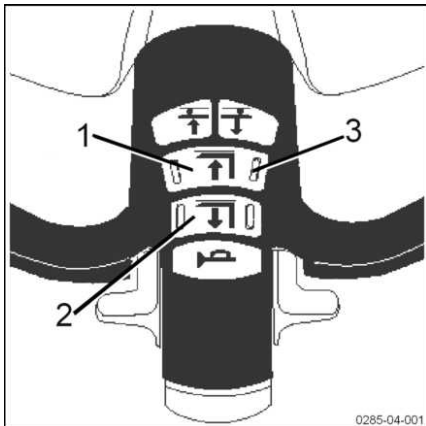

Initial Lift

Lifting the load arms:


- Press the button (4).

The load arms are raised.

Lowering the load arms:

- Press the button (5).

The load arms are lowered.

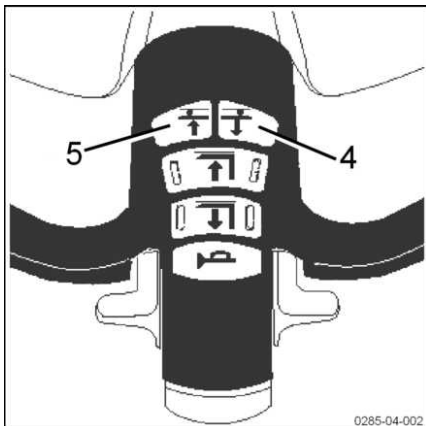

⚠ CAUTION

Risk of the load swinging and loss of stability

Do not drive with a load in the raised position without load on the load arms. The high load must be lowered as close as possible to the load in the low position. The operator must lower the forks again before moving the truck.

Transporting loads

Handling a single load

DANGER

Risk of truck falling

Do not stack the initial lift high.

Before picking up a load

Ensure that the load weight does not exceed the capacity of the truck.

- Refer to the nominal capacity specified on the capacity label of the truck
- Also ensure that the load is stable, well-balanced, attached securely and centred to avoid dropping any part of the load
- Check that the width of the load is compatible with the width of the forks
- Check that the load is not damaged

CAUTION

Risk of injury

Safety shoes must be worn.

Transporting people is strictly prohibited. Do not use the forks to lift a person.

DANGER

Risk of tipping

It is essential to slow down when approaching a corner or on wet ground.

CAUTION

Arrangement of loads

Do not touch nearby loads or loads positioned at the side or in front of the load being handled.

Arrange the loads with a small space between them to prevent them hooking onto one another.

DANGER

Risk of crushing fingers, hands and arms

Do not put your hands above the mast protection. Do not disassemble the mast protection.

Picking up a load from the ground

- Use the initial lift to raise a load of up to 2000 kg several centimetres from the ground.

Transporting a load

⚠ DANGER

Risk of accident

There must be no one under or near the truck when the load is in the raised position.

⚠ DANGER

Risk of falling

Never transport a load with the forks in the raised position as the truck may become unstable.


Observe the following recommendations:

- Drive forwards for optimum visibility
- Travel up or down slopes with the load up-hill Do not travel across the slope or make a U-turn
- Reverse travel is used for setting down the load Adjust your speed, as the position of the forklift operator is now less comfortable
- Do not drive with an unstable load
- If visibility is poor, let someone guide you
- Raise the forks slightly in order to pass obstacles
- Be careful of low passageways, low doorways, scaffolding, pipes etc.
- Check that the width of the load is not greater than the width of the aisle

Setting a load down on the ground

Proceed as follows:

- Drive the truck to the required location.
- Carefully move the load into the unloading zone.
- Lower the load until the forks are free.
- Withdraw the truck in a straight line.
- Raise the forks a few centimetres.

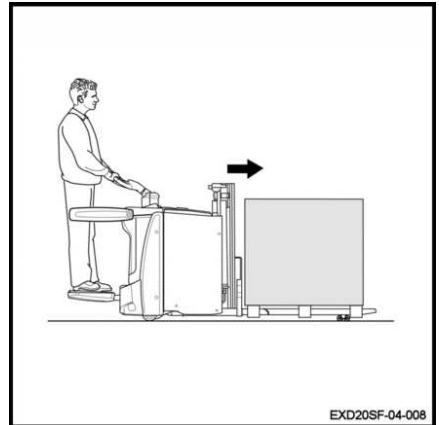

Transporting loads

⚠ CAUTION

Risk of falling

Do not touch nearby loads or loads positioned behind the truck.

⚠ CAUTION

Risk of accident

Before you set down the load, ensure that no one is around the truck or the load.

Stacking a load

⚠ DANGER

Risk of loss of stability

In order to retain maximum stability and to avoid any risk of overloading the truck, do not use the initial lift control to disengage the load from the storage area.


Proceed as follows:

- Drive the truck to the required location.
- Lower the load arms completely.
- Raise the forks clearly above the level where the load is to be placed.
- Drive the truck forward into the rack.
- Lower the load until the forks are free.
- Withdraw the truck in a straight line.
- Lower the forks again until they are several centimetres from the ground.

⚠ DANGER

Risk of fatal accident

There must be no one under or near the truck when the load is in the raised position.

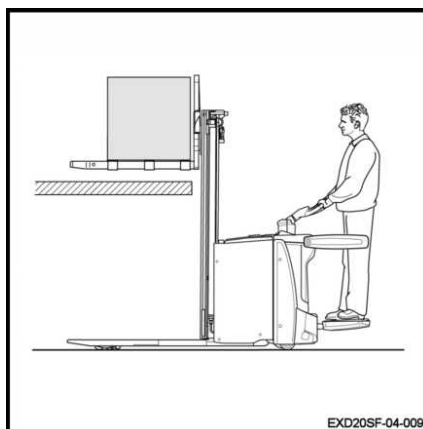

Picking up a load at a height

Proceed as follows:

- Drive the truck to the required location.
- Lower the load arms completely.
- Lift the forks to the height of the pallet.
- Carefully move the forks forward under the pallet.
- Lift the forks until the pallet is lifted free of the rack.
- Move slowly to withdraw the forks from the rack.

⚠ DANGER

Risk of hooking the mast on the rack

Do not start lowering the forks until they are completely clear of the rack. The forklift operator must remain vigilant and ensure that there are no obstacles preventing the lowering of the forks.

- With the load on the forks, lower the forks again until they reach the ground.
- Lift the load arms to move the truck.


Before leaving the truck

i NOTE

Always stop the truck on level ground away from traffic routes.

Proceed as follows:

- Lower the forks to the lowered position.
- Switch off the ignition (key or electronic key).
- In the event of a prolonged shutdown, press the emergency off switch. Then disconnect the battery.

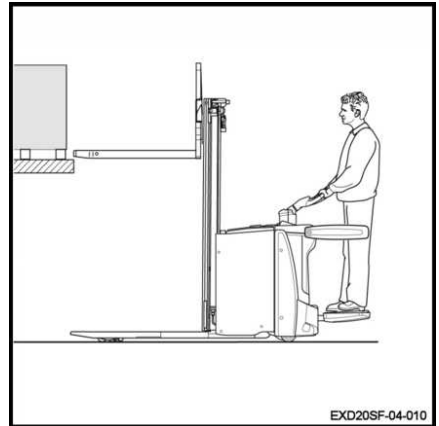

Transporting loads

Handling two stacked pallets

Double pallet stackers enable two stacked loads to be transported:

- One load on the load arms (initial lift).
- One load on the forks.

⚠ DANGER

Risk of loss of stability

The overall weight of the two loads must not exceed the maximum capacity of the machine (refer to the capacity plate).

The heavier load must be placed on the load arms.

Picking up two loads


- Lower the load arms.
- Raise the forks to the correct height to load the upper pallet.
- Carefully move the forks forward into the pallet.
- Raise the forks (1) to lift the first upper load.
- Move slowly in a straight line to withdraw the forks from the rack.

⚠ DANGER

Risk of hooking the mast on the rack

Do not start lowering the forks until they are completely clear of the rack. The operator must remain vigilant and ensure that there are no obstacles preventing the lowering of the forks.

- Lower the forks to move the truck.
- Lift the forks back to a suitable height (to avoid all obstacles).
- Carefully move forward to fetch the second load.

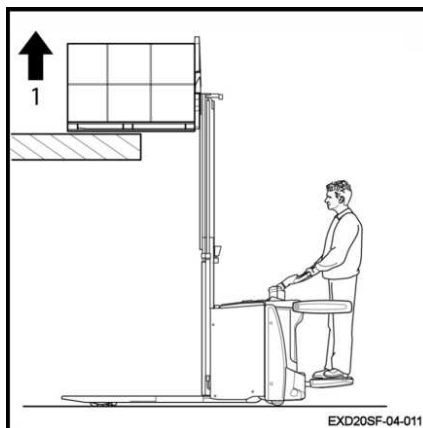

- Raise the load arms (2) to lift the load from the ground. ▷
- Lower load (Q1) again as close as possible to load (Q2) before driving.

⚠ CAUTION


Risk of crushing goods

Make sure that there is enough space above load (Q2) so as not to crush the top of the pallet.

- Reverse the truck slowly to withdraw the pallets from the racking.

⚠ CAUTION

The total load (Q1) + (Q2) must not exceed 2000 kg. It is essential that **Q1 is less than Q2** (see details on reading the double pallet stacker label).

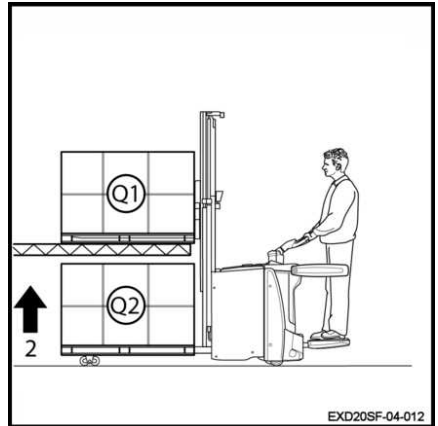


Transporting two loads

Observe the following recommendations:

- The normal direction of travel is forwards
- Always travel up or down slopes with the load uphill
- In the event of poor visibility, move slowly and carefully and ask somebody to guide you
- Do not travel with a load (Q1) on the forks if there is no load (Q2) on the load arms above 300 mm from the ground
- The heavier of the two loads (Q2) must be placed on the bottom on the load arms
- Keep the upper load (Q1) as close as possible to load (Q2) at all times

▷

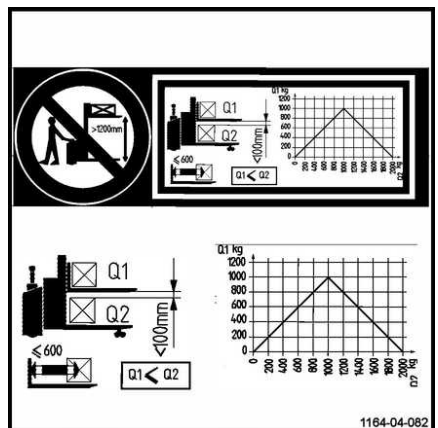

Setting down two loads

- Carefully move the truck to the required location.
- Raise the forks clearly above the level where the load is to be placed.
- Slowly move the loads towards the racking.
- First of all, place the lower pallet on the ground and then place the upper pallet on the first level.
- Slowly withdraw the truck in a straight line.

Transporting loads

- Lower the forks again.

WARNING

Lifting and lowering the forks

The initial lift or lowering operation (load arms) is matched by the forks.

Before leaving the machine

CAUTION

Parking the truck

Always stop the machine on level ground away from traffic routes.

- Lower the forks (unladen) and the load arms to the lowered position.
- Turn off the ignition with the key or the electronic key.
- In the event of a prolonged standstill, press the emergency off switch and disconnect the battery.

Driving assistance system: Dynamic Drive Control

Description of the Dynamic Drive Control ▸ Control

The Dynamic Drive Control option is a system that assists when driving and using the truck.

The forklift operator must remain vigilant under all circumstances and adhere to the truck capacity plate.

⚠ CAUTION

Risk of accident

Despite this option, the forklift operator must remain vigilant. The safety guidelines must be observed.

A specific screen for this option is available on the display. The screen is only displayed when double-stacking is in operation.

No indication of the weight present on the forks is given. Only the maximum weight (1) is communicated when present on the forks.


The load on the load arms, Q2 (4), must be greater than or equal to the load on the forks, Q1 (3).

The maximum speed of the truck depends on the height of the forks.

The vertical bars (2) inform the operator of the speed configuration of the truck. The diagram is displayed only when double-stacking is in operation. It indicates if the speed is high, medium or low.

The speed varies depending on the load on the forks between 0.3 and 1.8 metres. The heavier the load, the lower the speed.

The forklift operator must remain cautious and adjust the speed to suit the environmental conditions.

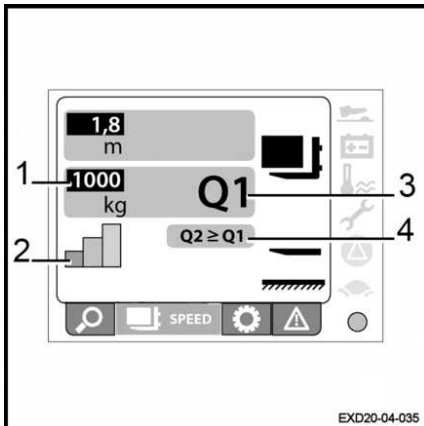

⚠ CAUTION

Risk of incorrect use of the truck.

The forklift operator must be trained in and familiar with the various features of this option.

Cold store usage (optional)

Cold store usage (optional) ▷

⚠ CAUTION

Standard trucks risk being subject to significant damage if used in extreme conditions.


Only trucks with the Cold Store option may be used inside cold storage. Specific oil designed for cold stores must be used.

These trucks are identified by their Cold Store label.

Area of Use

Trucks with the Cold Store option may be used in two different areas:

- **operating range 1:** the truck can operate at a temperature of -5°C and, for short periods, at a temperature of -10°C . It must be parked outside of the cold store.
- **operating range 2 (Entry / Exit applications):** the truck must be used alternately inside and outside of the cold store. It can withstand temperatures between -30°C and $+45^{\circ}\text{C}$. Specific rules should be followed so as not to damage the truck and to avoid the occurrence of streaming (see the following paragraph). The truck is parked outside of the cold store.

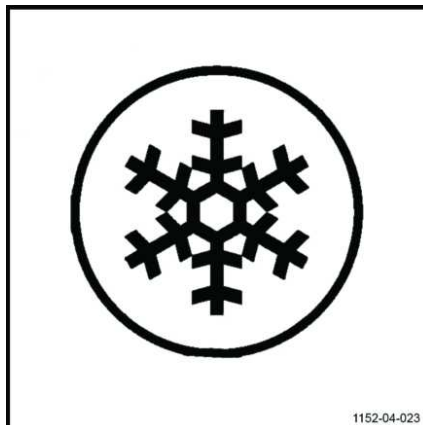

Precautions for Use

The difference in temperature between the cold store and the room temperature zone may result in the formation of condensation water.

This water can freeze when the truck goes back into the cold store and jam the moving parts of the truck.

Streaming occurs if the truck remains outside of the cold store for more than ten minutes. Therefore, it is essential to leave the truck outside of the cold store for 30 minutes so that the condensation disappears.

⚠ DANGER

If the condensation freezes in the cold store, it is prohibited to operate the jammed parts.

This could cause permanent damage to the truck.

Parking

The truck must be parked outside of the cold store.

Parking inside the cold store could cause serious damage to the electrical and mechanical equipment (seals, hoses, rubber and synthetic parts).

CAUTION

Do not leave discharged or unused batteries in the cold store.

They could be permanently damaged.

Before leaving the truck

Before leaving the truck

- Choose a safe and level location.
- Set down the load and lower the forks completely.

The forks must touch the ground.

- Switch off the truck.

The automatic braking is activated.

- Remove the switch key.

DANGER

Danger of death!

It is prohibited to park the truck with a load in the raised position or the forks in the raised position.

Handling the battery

Battery type

Trucks can be fitted with different types of battery. Comply with the information indicated on your battery's type plate, as well as with its features.

WARNING

The weight and size of the battery influence the stability of the truck.

The new battery must weigh the same as the old one. Do not remove extra weight or change its position.

CAUTION

Be careful not to damage any wiring when replacing the battery.

Order picking

Maintenance personnel

The battery must be replaced by specially trained personnel. Personnel must follow the manufacturer's instructions for the battery, the charger and the truck.

It is also necessary to follow the battery maintenance instructions.

Fire protection measures



WARNING

Do not smoke or create a flame when handling batteries. There must be no combustible material or tools that produce sparks within a minimum radius of 2 m around the truck and the battery charger.

The work area must be well ventilated. Fire extinguishers must be provided and located near the work area.

Handling the battery

Parking the truck securely


When the battery is being worked on, the truck must be parked safely. The truck can only be restarted when the covers and connectors have been put back in the operating position.

Opening and closing the battery hood ▸ hood

Opening the battery hood

To open the battery hood:

- Immobilise the truck.
- Lower the forks.
- Switch off the ignition (key or electronic key).
- Press the emergency off switch.
- Lift the hood (1) using the handle designed for this purpose.

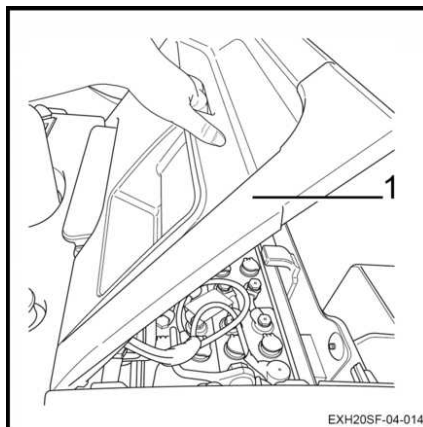

Closing the battery hood

To close the battery hood:

⚠ WARNING

Risk of trapping fingers

When closing the battery hood, correctly position your fingers to avoid any risk of them being trapped.

- Close the hood (1).
- Ensure that the battery hood is closed securely.

⚠ CAUTION

Risk of sparks

Never drive with the hood open or incorrectly closed.

⚠ DANGER

Risk of falling

Do not climb on the battery compartment hood.

Charging the battery using an external charger

⚠ CAUTION

Deep discharging may damage the battery.

- Charge the battery immediately.

The fixed socket on the truck (1) is located above the battery and under the battery hood.

- Park the truck safely.
- Before charging, check the condition of the battery cable and the charger cable. Replace them if necessary.
- Open the hood and leave it open.
- Pull the handle of the battery connector (2) to disconnect it from the fixed socket on the truck (1).
- Connect the battery connector to the wall-mounted connector.

⚠ WARNING


Electrical risk

Only unplug the battery connector from the battery charger when both the battery charger and the truck are switched off.



NOTE

Follow the instructions provided by the manufacturer of the battery and the battery charger (equalising charge).

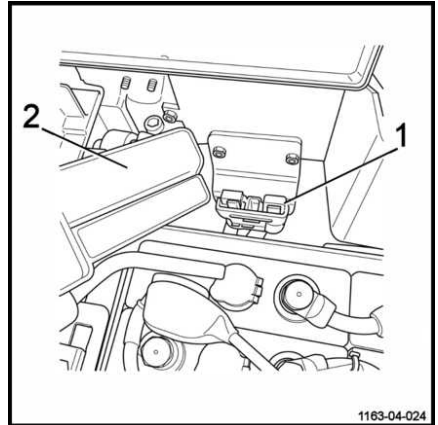

⚠ WARNING

Risk of damage, short circuit or explosion.

Do not place any metal objects or tools on the battery.

Smoking is prohibited.

⚠ WARNING

The electrolyte (diluted sulphuric acid) is toxic and very caustic.

Follow the safety regulations when handling battery acid.

Handling the battery

WARNING

Explosive gases are generated during battery charging.

- Make sure that the area is well-ventilated.
- Make sure that the battery hood remains open for the entire time the battery is charging.

On-board charger

Precautions for installation and use

The on-board charger means you no longer have to use a charging room. This charger can be connected to any 2P+T 230 V 16 A socket. However, before charging this way, the user must ensure that the location selected for charging satisfies all the required safety guarantees:

- The electrical system must comply with standard NF C 15 100.
- The electric wall socket must be a 2 pole + earth 16 A 230 V type that is correctly connected and protected.
- Before charging, check the condition of the connections and cables (retighten, as required).
- Charging must be carried out in an area where there is no condensation or pollution and there must be sufficient ventilation.
- The charger must not be exposed to oil, grease or other similar substances.
- Charging must be carried out with the truck stopped.
- The increase in the temperature of the unit in relation to the ambient temperature is 10°C maximum. The temperature of the expelled air is 25°C maximum. Wait 10 minutes after stopping the charger before touching the unit.
- As the charger is cooled by forced ventilation, do not block the air inlets and outlets. There must be sufficient air circulation to the outside.

The charger is designed:

- To be incorporated inside an industrial truck. The charger must never be used alone (out of the truck).
- To stay permanently connected to the battery.
- To operate in all positions.
- Remain connected to the mains during periods of truck downtime to ensure the availability of the machine.
- To tolerate "opportunity charging".

⚠ CAUTION

Risk of damage to the mains cable resulting in electric shock and/or burns.

Park the truck very close to the wall-mounted mains socket to avoid tensioning the charger's mains cable during charging.

Electrical specifications of the charger

Mains voltage	190 V < U < 260 V
Network frequency	50 / 60 Hz +/-1% (automatic adaptation) No inrush current to the mains connection
Maximum output power	1040 W +/-3%
Maximum output current	35 A +/-2%
Nominal battery voltage	24 V
Tolerance on the voltage of bearing U	1%

Electrical safety

- Protection against reversal of battery polarity: the charger is protected by an output relay. After the battery is reconnected in the right direction, the charger starts charging without requiring human intervention.
- Mains protection: by a 250 V 10 A 5x20 timed fuse. The mains fuse is fitted directly to the electronic card. The user is not authorised to change this fuse. If this fuse is faulty, the charger must be returned to the service centre.

Other charging characteristics

Maintenance charges

If the charger stays connected to the mains, it restarts a charging cycle every 48 hours after the end of the previous charge in order to compensate for self-discharge.

Partial recharging

The charger adapts automatically to the battery discharge situation and therefore allows

Handling the battery

any type of partial charging to be carried out ("opportunity charging").

The overcharging calculation takes into account partial recharging. The mixture is always sufficient, without needless water consumption, which prevents premature wear of the batteries (often due to overlong charging periods) and reduces the need for maintenance.

Protection during charging

Mains micro-break protection

If the mains power is cut off, all the existing charging parameters are stored in the memory for 13 minutes. As soon as the mains power returns, charging resumes from the point (I, U) at which it was cut off, with the number of Ah already injected stored in the memory.

If the cut-off period is longer than 13 minutes (the truck could have been used), a complete charging cycle is initialised.

Time protection

If the duration of phases I1 + P + U is more than 16 hours, the charger automatically stops. This can happen when a battery has a short-circuited component. Simply reset the mains to clear the fault.

Temperature safety

As the charger is cooled by ventilation, the air inlets and outlets must never be blocked.

The fan runs when the mains power is connected. It stops when charging is complete or when the mains power is disconnected.

The charger supplies reduced power if the ambient temperature exceeds the usage temperature range in order to protect itself (the charging period will be extended in this case).

The charger stops if the micro-controller detects a temperature measurement fault.

Using the on-board charger



NOTE

The charger is compatible with wet lead and gel batteries with a maximum capacity of 400 Ah.

CAUTION

Risk of damaging the battery

Do not disconnect the battery connector during charging (green indicator light flashes).

The truck cannot be operated during charging.


WARNING

A battery produces explosive gases during charging.

- Make sure that the area is well-ventilated.
- Make sure that the battery hood remains open for the entire time the battery is charging.

The on-board charger is intended to recharge the battery.

- Switch off the truck.

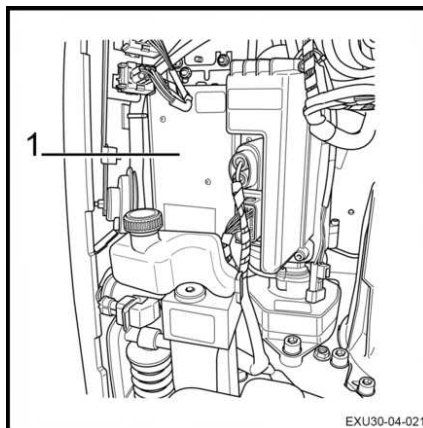

Do not pull the emergency stop handle. This operation cuts off the circuits and stops the battery from charging.

- Connect the charger plug (1) to a mains socket.

Phase	Green LED	Red LED
Mains socket disconnected	Off	Off
Charging phases	Flashing	Off
Stopped/ Equalisation/ Maintenance phase	Continuously lit	Off
Charging process too long	Off	Continuously lit
Charger po- larity reversed (+battery and -battery charger ca- bles reversed, with the bat- tery remain- ing normally connected to the truck as- sembly)	Continuously lit	Continuously lit
Battery polari- ty reversed	Off	Off
Selector in neutral posi- tion	Flashing	Flashing

CAUTION

Risk of damaging the battery

It is strictly prohibited to use an on-board charger other than the one recommended.

Handling the battery

⚠ CAUTION

Risk of damage to the mains cable due to frequent operator handling. Risk of electric shock and/or burns!

The mains cable must be regularly checked as part of periodic statutory checks and maintenance operations.



NOTE

The on-board charger is not compatible with the Cold Store option.

Adjusting the on-board charger

Charging curve selector

The curve is selected using the selector located on the front face of the charger.

The curve selector is protected by a cap.

The 4 fine lines indicate neutral positions. The charger does not flow and the two LEDs flash simultaneously to indicate that no curve has been selected.

⚠ CAUTION

Risk of premature damage to the battery.

Ensure that the charger setting corresponds to the type of battery.


If the battery is changed, ensure that the setting corresponds to the type of battery.

The four thick lines indicate the four charging curves:

- open lead-acid battery with a capacity less than or equal to 210 Ah
- open lead-acid battery with a capacity equal to or exceeding 210 Ah
- GEL battery with a capacity below 210 Ah
- GEL battery with a capacity greater than 210 Ah

⚠ CAUTION

The charger is supplied in the **neutral** position.

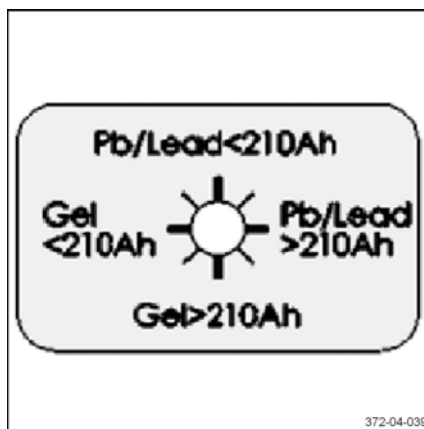

Changing the vertical access battery

To change the battery, proceed as follows:


- Immobilise the truck.
- Lower the forks.
- Switch off the ignition and remove the key.
- Press in the emergency off switch.
- Open the battery hood.
- Disconnect the battery connector.
- Attach the slinging hooks to the battery compartment.



NOTE

Using secured hooks is recommended.

- Lift the battery. Take care not to hook onto the upper bridge piece of the mast.
- Replace the battery.
- Position the new battery in the chassis.
- Remove the slinging hooks.
- Reconnect the battery connector.
- Close the battery hood.
- Return the truck to service.

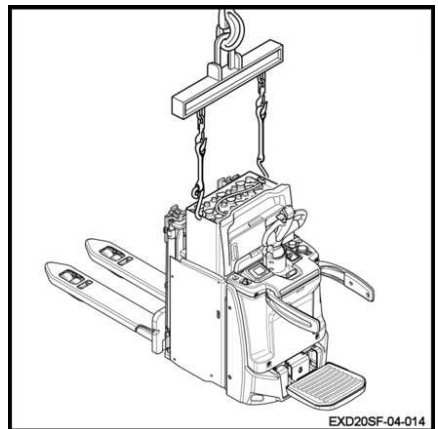

Changing the side access battery: system 1

There are two different systems for locking the side access battery. Check which system is fitted on your truck before changing the side access battery.

DANGER

Risk of trapping fingers

It is advisable to wear gloves when changing the battery.

Handling the battery

⚠ WARNING

Risk of injury


Safety shoes must be worn when changing the battery.

Before handling, ensure that there is nobody around the truck.


To remove the battery, we recommend that you use a fixed roller frame or a truck with extraction rollers (fitted with rollers) for easier handling of the battery.

To change the battery, proceed as follows:


- Immobilise the truck.
- Lower the forks.
- Switch off the ignition and remove the key.
- Press the emergency off switch.
- Open the battery hood.
- Disconnect the battery connector.
- Place the connector on the battery cells.
- Unlock the door that is not attached to the side of the battery by lifting the latch (1).
Hold the door (2) to prevent it falling.

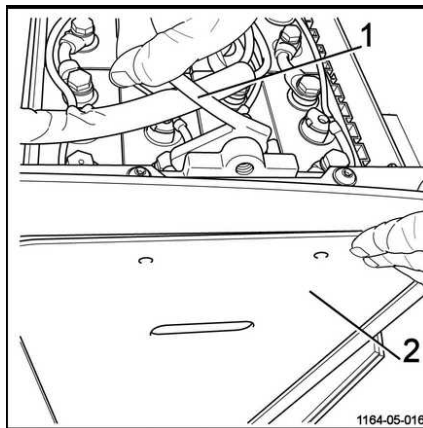

- Remove the door (2) (if this option is selected) and put it to one side. ▷
- Position the truck with extraction rollers or the roller frame in the upright position next to the battery compartment on level ground.

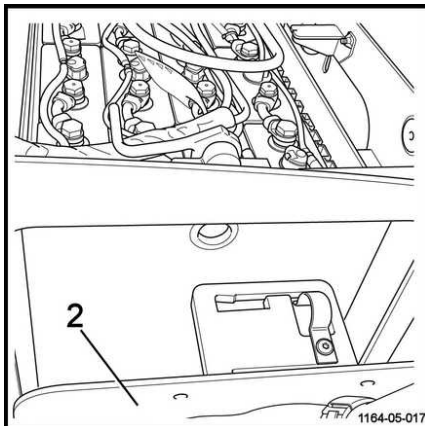


- Operate and pull the locking handle (2) in the direction indicated by the arrow. ▷

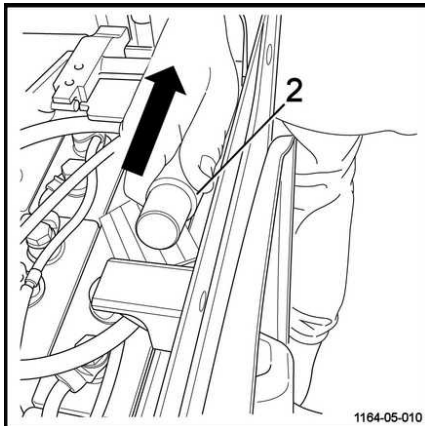


Handling the battery

- Lift the locking bar (3) until the battery is freed.

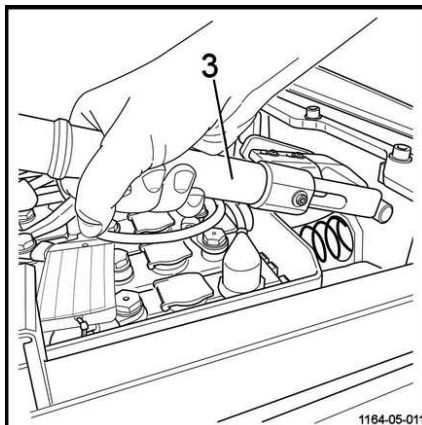


- Pull the battery onto the truck with extraction rollers or the roller frame
- Replace the battery. Remove the discharged battery and position a charged battery on the roller frame.
- Position the truck with extraction rollers or the roller frame (4) in the upright position next to the battery compartment.

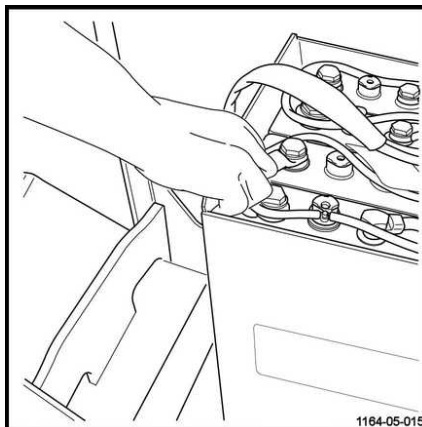

- Push the battery into the compartment.

⚠ DANGER**Risk of trapping fingers**

Push the battery from the rear side (A) of the battery. Take care not to trap your fingers by pushing from the top or the side of the battery.

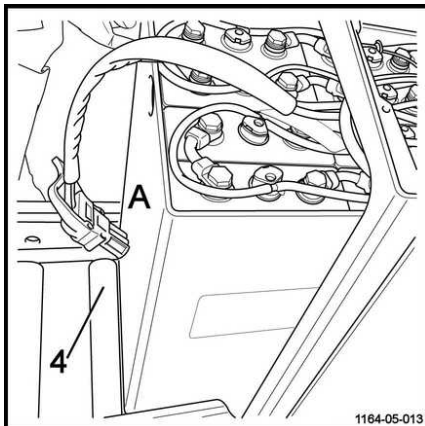


- Push until a click is heard. The battery is correctly installed.

**⚠ WARNING****Risk of injury**

Ensure that the battery is in the end position and that the hook is correctly holding the battery.

⚠ DANGER**Risk of injury**

The battery is correctly positioned but is not yet locked.

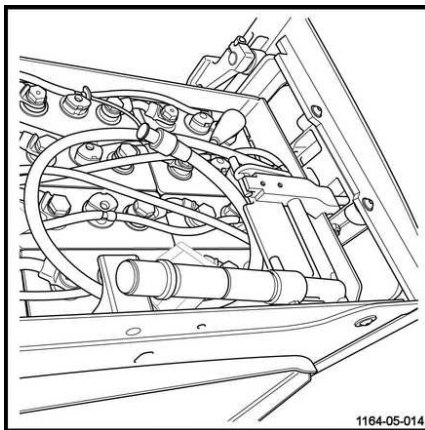

Handling the battery


- Lower and lock the handle (2) of the locking bar (3) in the direction indicated by the arrow. The locking bar must be horizontal and must be right up against the stop (5). ▷

⚠ CAUTION

Risk of locking the battery incorrectly

The locking bar must not in any circumstances be positioned under or on top of the stop. It must be positioned against the stop.

- Reconnect the battery connector.

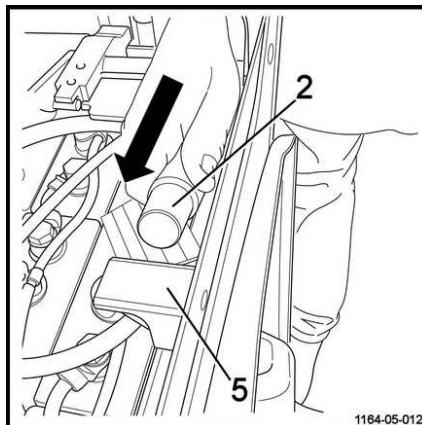


- Lower the latch of the battery compartment door (if this option is selected). The door that is not attached to the side of the battery must be correctly locked. ▷
- Refit the battery hood.
- Return the truck to service.

⚠ WARNING

Risk of injury

Before restarting the truck, ensure that the battery is correctly installed. Check that the battery is locked and that the battery hood is closed.

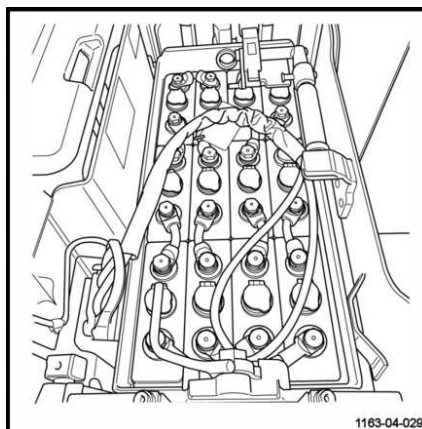

Changing the side access battery: system 2

There are two different systems for locking the side access battery. Check which system is fitted on your truck before changing the side access battery.

DANGER

Risk of trapping fingers

It is advisable to wear gloves when changing the battery.

WARNING

Risk of injury

Safety shoes must be worn when changing the battery.

Before handling, ensure that there is nobody around the truck.


To remove the battery, we recommend that you use a fixed roller frame or a truck with extraction rollers (fitted with rollers) for easier handling of the battery.

To change the battery, proceed as follows:


- Immobilise the truck.
- Lower the forks.
- Switch off the ignition and remove the key.
- Press the emergency off switch.
- Open the battery hood.
- Disconnect the battery connector.
- Place the connector on the battery cells.
- Position the truck with extraction rollers or the roller frame in the upright position next to the battery compartment on level ground.

Handling the battery

- Lift the locking handle (1) until the battery is freed. ▷

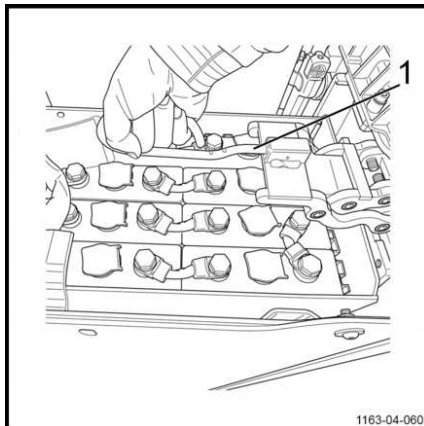


- Pull the battery onto the truck with extraction rollers or the roller frame ▷
- Replace the battery. Remove the discharged battery and position a charged battery on the roller frame.
- Position the truck with extraction rollers or the roller frame (2) in the upright position next to the battery compartment.

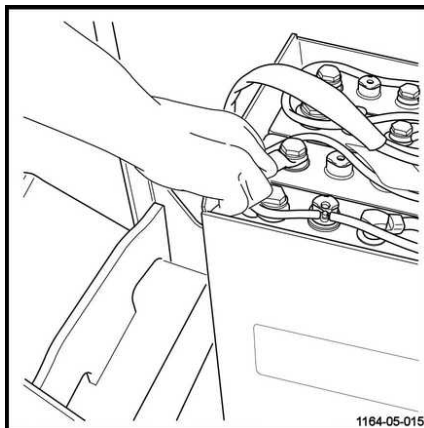

- Push the battery into the compartment.

**⚠ DANGER****Risk of trapping fingers**


Push the battery from the rear side of the battery (3). Take care not to trap your fingers by pushing from the top or the side of the battery.

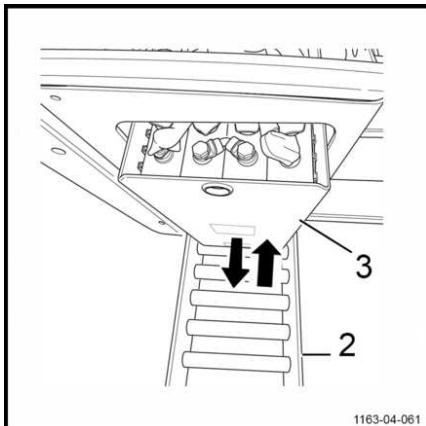

- Push until a click is heard. The battery is correctly installed.


**⚠ DANGER****Risk of injury**

The battery is correctly positioned but is not yet locked.

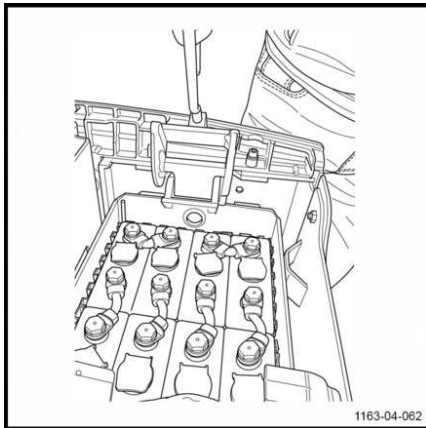

Handling the battery

- Lower the handle (1) of the locking bar. ▷

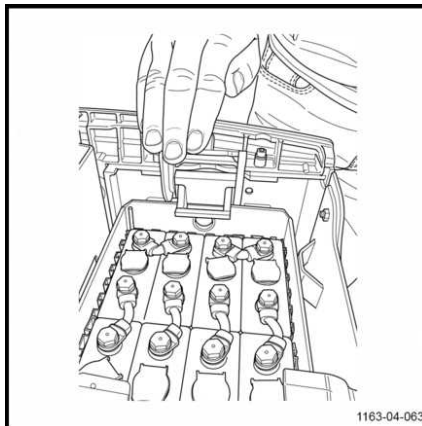


- Reposition the locking bar (1) horizontally. ▷
- Reconnect the battery connector.
- Refit the battery hood.
- Return the truck to service.

WARNING

Risk of injury

Before restarting the truck, ensure that the battery is correctly installed. Check that the battery is locked and that the battery hood is closed.

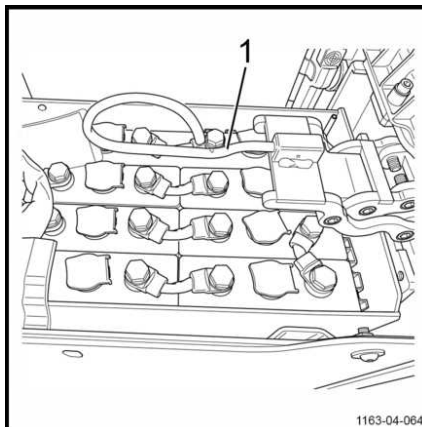

Handling the truck in an emergency

Emergency lowering of the mast ▸

The emergency control (1) allows the mast to be lowered manually in the event of a problem.

This operation is to be performed as follows:

- Remove the front hood of the technical compartment.
- Loosen the screw (1) using an 8 mm open-ended spanner.

⚠ DANGER


Danger of death!

Do not walk underneath raised loads!

Check that no one is in the danger area before manually lowering the mast.

When the forks are fully lowered:

- Tighten the screw (1) using an 8 mm open-ended spanner.
- Refit the front hood of the technical compartment.

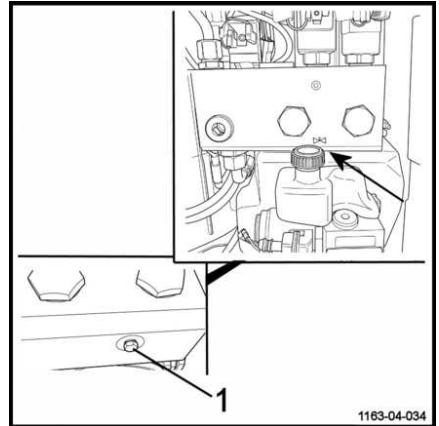

1163-04-034

Handling the truck in an emergency

Truck towing procedure

It is not possible to tow the truck with no electrical function. The electromagnetic brake remains in the closed position.

Truck towing is authorised with a rigid connection (tow bar) if the truck to be towed can no longer be braked. Check that the towing vehicle is sufficiently powerful to pull and brake the truck being towed.

Moving with no battery



NOTE

In the event of an electrical fault or no battery, it is possible to unlock the brake manually.


⚠ CAUTION

This procedure must be carried out by authorised personnel.

- Unload the fork arms, then disconnect the battery. ▷
- Remove the engine cover.
- Two M5 X 35 screws (1) are required.
- Screw the screws (1) to the brake (2) in the holes (3). The brake is then unlocked.

⚠ CAUTION

The truck must only be towed at low speeds.

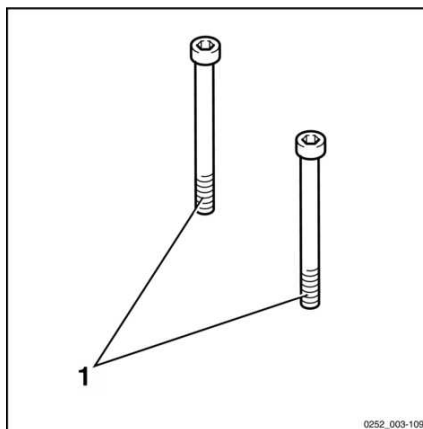


Handling the truck in an emergency

- After towing, chock the truck to prevent it from moving.
- To re-establish brake operation, unscrew and remove the two screws (1).
- Refit the covers.

⚠ WARNING

It is essential that the covers are correctly refitted before the machine is used.

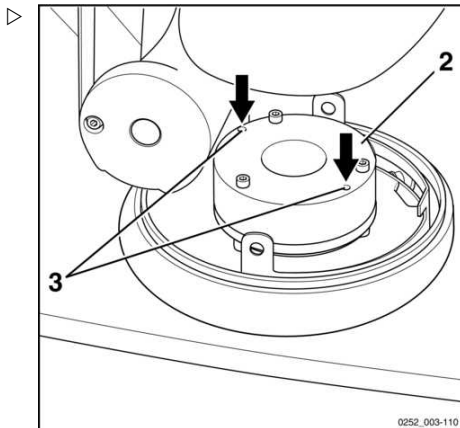

Handling the truck in specific situations

Handling the truck in specific situations

Slinging the truck

⚠ DANGER**Danger of truck falling.**

Only use slings and a hoist of sufficient quality. Check the weight of the machine (including battery) to choose a suitable device. Refer to the technical features.

Observe the following instructions:

- Shut off the truck and disconnect the battery connector.
- Raise the platform and lower the safety side protection guardrails.
- Remove any items that could fall.
- Protect all parts that come into contact with the lifting device.
- Attach the lifting device to the sling ring (1).


**NOTE**

Do not sling the truck by the tiller. Do not sling the truck by the accessory support.

- Carefully lift the truck.

⚠ DANGER**Risk of falling.**

Make sure no one is under or near the truck when slinging the truck.

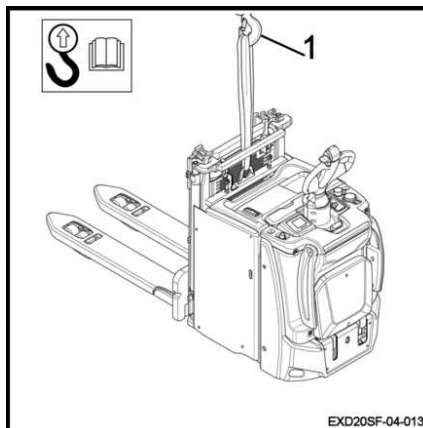

Lifting the truck

⚠ DANGER

Danger of swinging

Truck lifting must be performed carefully.

For some work, it is necessary to lift the truck.

- Lift the load arms.
- Switch off the ignition and disconnect the battery connector.
- Use a jack with adequate lifting capacity.

Front section of the truck:

- Place a jack under the chassis (1).


For work on the lifting device:

- Position the jack under the battery frame (2).

Maintenance of the load wheels:

- Place the jack under the forks in the indicated locations (3).

As a safety precaution, always insert a wooden wedge.

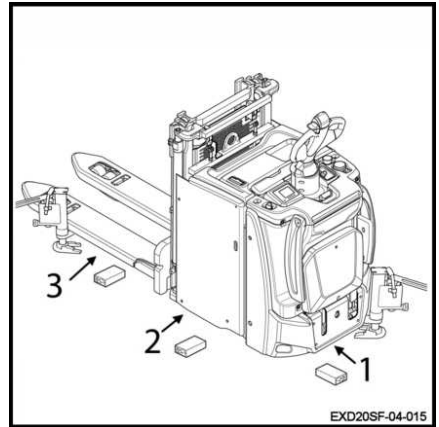

⚠ WARNING

Risk of truck falling

Immobilise and chock the truck after lifting it.

Transporting the truck

⚠ CAUTION

Always switch off the ignition and disconnect the battery.

Never tie down or sling the truck by the control unit or other points not designed for this.

⚠ CAUTION

Risk of damage to the truck.

Use a hoist and woven **NON METALLIC** slings with an adequate lifting capacity. Refer to the load weight shown on the truck's capacity plate.

The lifting operations must be performed by qualified personnel.

Trucks are generally transported by road or by rail.

Handling the truck in specific situations

The truck must be suitably protected from the effects of the weather during transport and storage.

To load or unload the truck, use an inclined plane or a mobile ramp.

If the truck is out of service or if the battery has been removed, sling the truck. See **Chapter 4 Slinging the truck**.

DANGER

Danger of death.

Do not stand within the hoist's operating radius or below the lifted truck.

Transporting the truck in the lift

The truck must only be taken in lifts with an adequate loading capacity that are designed for this purpose, and for which authorisation has been received from the operator. Inside the lift, the truck must be immobilised so that no part is in contact with the wall of the lift cage.

A minimum safety distance of 100 mm from the walls of the lift must always be observed.

Anyone transported with the truck must only enter the lift after the truck has been correctly immobilised and they must exit the lift first.

Driving on loading bridges

Before crossing a loading bridge, the operator must make sure it is properly attached and secured and its load capacity is sufficient. Cross the loading bridge slowly and carefully. The driver must be sure that the vehicle to be entered is secured sufficiently against movement

and that it can support the load of the forklift truck.

The lorry driver and lift truck operator must coordinate the departure time of the lorry.

5

Maintenance

General maintenance information

General maintenance information

General

The following instructions contain all the information required for maintenance of your truck. Carry out the various maintenance work in compliance with the maintenance plan. This will ensure that your truck is reliable and in good working order and that the warranty remains valid.

Maintenance plan

One of the display functions indicates the truck's hours of use. Refer to it and consult the truck's maintenance plan.

The maintenance plan is followed by advice to facilitate work.

Maintenance intervals must be reduced if the truck is used under harsh conditions (extreme heat or cold, large quantities of dust).

Grade and quantity of lubricants and other consumables


Only lubricants and other consumables specified in these operating instructions are authorised for use in maintenance work.

Lubricants and other consumables required for truck maintenance are listed in the maintenance specifications table.

Never mix different grades of grease or oil. If it is absolutely necessary to change brands, make sure to flush thoroughly beforehand.

Before changing any filters or working on the hydraulic system, thoroughly clean the surface and the areas around the part.

All containers used to pour oil must be clean.

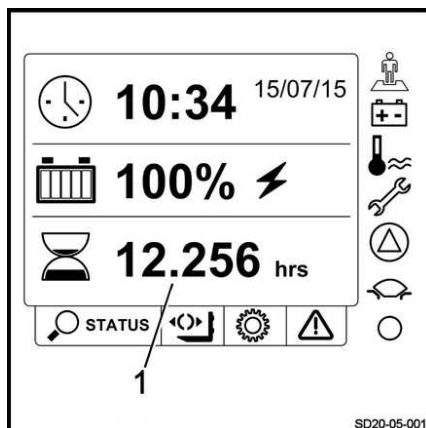

Servicing and maintenance personnel training and qualification

Truck maintenance must only be carried out by qualified and authorised personnel.

The annual inspection for prevention of accidents at work must be carried out by a person qualified to do so. The person carrying out this inspection must provide their expertise and opinion without being influenced by economic factors or company internal issues. Safety is the only critical deciding factor.

The person responsible for carrying out the inspection must have sufficient knowledge and experience to be able to assess the condition of the truck and the efficiency of the protective installations in accordance with the technical regulations and principles established for checking industrial trucks.

Battery maintenance staff

Batteries must only be recharged, maintained and changed by specially trained personnel. Personnel must follow the manufacturer's instructions of the battery, the battery charger and the truck.

It is essential to follow the battery maintenance instructions and the battery charger operating instructions.

Maintenance operations that do not require special training

Simple maintenance operations such as checking the hydraulic fluid level or checking the battery electrolyte level can be carried out by persons with no special training.

A specific qualification is not necessary.

Refer to the maintenance section of this manual for further information.

Ordering spare parts and consumables

Spare parts are provided by our spare parts service department. You will find the information required to place an order in the spare parts and fitting catalogue.

Only use spare parts recommended by the manufacturer.

Unauthorised spare parts may increase the risk of accidents due to faults relating to quality or incorrect choices. Anyone who uses non-compliant spare parts must assume full responsibility in the event of an accident.

Safety guidelines for maintenance

Safety guidelines for maintenance

Servicing and maintenance measures

To avoid accidents during servicing and maintenance operations, take all necessary safety measures. For example:

- Ensure that there is no risk of the truck moving or starting up unexpectedly. For this reason, remove the battery connector.

Working on the electrical equipment

Operations on the truck's electrical system must only be carried out when there is no voltage supply.

Operating checks, testing and adjustment work on parts supplied with voltage must only be carried out by personnel:

- who have received detailed instructions
- who have been authorised to perform this work
- who have taken the necessary precautionary measures.

Rings, metal bracelets etc., must be removed before carrying out any operations on electric components.

Remove the electric equipment (which comprises electric components such as the traction controller) before carrying out any welding operations. This precaution prevents this electric equipment from being damaged.

Operations on the electric system require the consent of the manufacturer.

Safety devices

After any repair or maintenance work, it is necessary:

- to refit all safety devices

- to check these for correct operation.

Recommended lubricants

DANGER

Toxic products.

Oils and other consumables are toxic products. It is advisable to handle and use them with the utmost care.

Hydraulic oil

Recommended oil for standard use:

ISO-L-HM 46 as per ISO 6743-4 or ISO VG46-HLP as per DIN 51524-2

Recommended oil for heavy-duty use:

ISO-L-HM 68 as per ISO 6743-4 or ISO VG68-HLP as per DIN 51524-2

Recommended oil for the cold store version:

ISO-L-HM 32 as per ISO 6743-4 or ISO VG32-HLP as per DIN 51524-2



NOTE

If in doubt, please ask your local dealer for advice. You should also consult your local dealer if a representative of an oil company offers you an oil product that is not specified in these operating instructions. Only the oils listed above are approved by the manufacturer. Using oil mixtures or hydraulic fluids that are not recommended can cause damage that may be expensive to rectify.

Transmission gear oil

Recommended oil:

Depending on the transmission gear fitted in the truck, two types of oil can be used:

- CLP PG220 DIN 51 517-3
- RENOLYN XT 150 DIN 51 517-3

Please contact the After-Sales Service to find out which oil should be used with your transmission gear.

Aerosol can for chains

Standard chain spray A167.

Multi-purpose grease

Lithium soap grease, extreme pressure with anti-wear additive - Standard DIN 51825 - KPF 2K - 30, KPF 2K - 20, KPF 2N - 30.



ENVIRONMENT NOTE

Used oil must be stored safely until it is disposed of in compliance with environmental protection measures. No one should have access to the used oil. Do not dispose of used oil in drains or allow it to penetrate soil.



ENVIRONMENT NOTE

Do not allow the product to disperse into the environment. Packaging that has contained this product is treated as waste. Contaminated packaging must be completely emptied and may then be recovered following a thorough clean.

Technical data for inspection and maintenance

Technical data for inspection and maintenance

Assembly	Consumables/lubricants	Capacities/adjustment values
Hydraulic system	Hydraulic oil	Minimum working capacity: 3.3 l Maximum working capacity: 3.5 l
Transmission gear	Transmission gear oil	1.1 l
Traction motor (2.3 kW)	1F1 fuse	Power: 300 A, quantity: 1
Steering unit ES30-24 (0.185 kW S1)	3F1 fuse	Power: 40 A, quantity: 1
Pump motor (2.2 kW)	1F1 fuse	Power: 300 A, quantity: 1
Control fuse	1F3 fuse	Control: 7.5 A, quantity: 1
Control fuse	1F4 fuse	Control: 5 A, quantity: 1
Battery	Distilled water	As required
Joints	Lithium soap grease	As required

Accessing the technical compartment

WARNING


Risk of injury

Before removing anything, turn the ignition off and press the emergency off switch.

To access the technical compartment, it is necessary to lift the top hood (1) and remove the front hood (2).

Proceed as follows:

- Lower the platform and raise the side protections.
- Unscrew the four screws (3) from the top hood (1).
- Lift the top hood slightly.
- Remove the two screws (4) from the front hood (2).

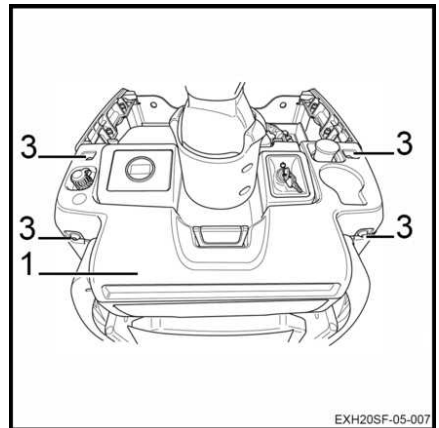


Accessing the technical compartment

- Remove the front hood.

The technical compartment must be closed once the operation is finished.

- Reposition the front hood (2).
- Tighten the two screws (4) of the front hood.
- Reposition the top hood (1).
- Tighten the four screws (3) of the top hood.
- Return the truck to service.

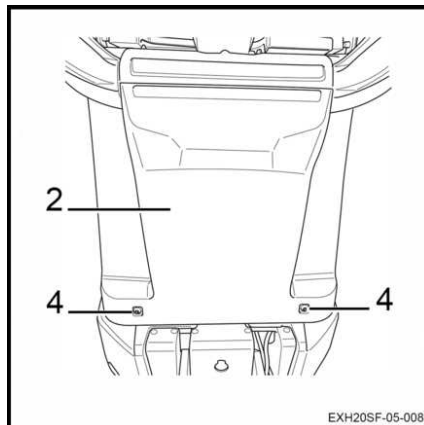

1000-hour service plan

Depending on the application, environmental conditions and driving style, the following procedures should be carried out every 1000, 2000, 3000, 4000, 6000, 7000, 8000 and 9000 hours

Preparation

Clean the truck

Check the error codes using the diagnostic tool

Chassis and equipment

Check the condition of the forks

Check the electromagnetic brake and ensure that it is working correctly

Check and grease the hinges

Check the pump motor brooms for wear

Check the transmission gear for noise and leaks

Grease the gears

Check the platform

Check the forklift operator side protection

Wheels

Check the condition and tightness of the wheels

Check the stabilisers

Electrical equipment

Clean the electric steering system and the lifting motors

Check the condition of the cables and the battery sockets and ensure that they are positioned correctly

Check the electrical insulation between the chassis and the electrical components

Check the electrical insulation between the chassis and the control unit components

Check the fuses

Check the battery acid level and the electrolyte level

Hydraulics

Check the hydraulic oil level

Check the condition of the pipe lines

Check the oil level of the controlled stabilisers

Load lift system

Check the condition and the length of the mast chain

Lubricate the forks and the mast guide rollers

Check the condition and mounting of the guard grille

5000-hour maintenance plan

5000-hour maintenance plan

Depending on the application, environmental conditions and driving style, the following procedures should be carried out every 5000 and 10,000 hours

Information

Carry out all 1000-hour maintenance work

Hydraulics

Drain the hydraulic oil

10,000-hour service plan

Depending on the application, environmental conditions and driving style, the following procedures should be carried out every 10,000 hours

Information

Carry out all 1000-hour maintenance work

Carry out all 5000-hour maintenance work

Motor

Drain the transmission gear oil

Chassis, bodywork and fittings

Cleaning the truck

Cleaning instructions

- Park the truck.
- Press the emergency off switch.

⚠ CAUTION

Electrical hazards

The battery must always be disconnected during cleaning procedures.

Washing the outside of the truck

⚠ WARNING

Risk of damage to the truck

- Do not use flammable liquids to clean the truck.
 - You must observe the safety rules set out above to prevent spark formation. Sparks could lead to a short circuit.
 - All components that are sensitive to moisture (particularly electric components) must be protected when the truck is cleaned.
 - Observe the manufacturer's instructions when using the cleaning product.
-
- Clean the truck with a non-flammable cleaning product mixed with water; a sponge and cloths.
 - Specifically clean the oil filling openings and surrounding areas as well as the lubricating nipples (before lubrication).



NOTE


A truck that is cleaned frequently must be lubricated more regularly.

Cleaning the electrical installations

⚠ WARNING

Electrical hazards

Do not expose electrical systems (especially motors) to direct jets.

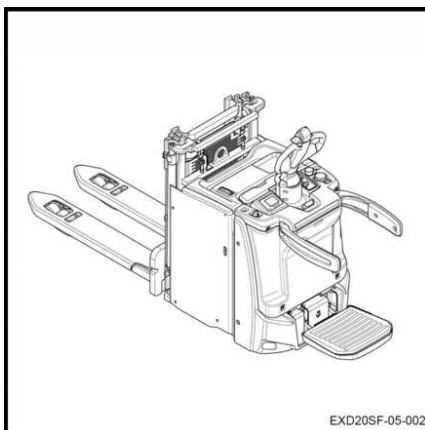

EXD20SF-05-002

Chassis, bodywork and fittings



NOTE

- Only use dry cleaning products.
- Do not remove the cowlings.
- Clean the electric installations with a non-metal brush and dry with lightly compressed air.

After washing

- Carefully dry the truck (e.g. with compressed air).

WARNING

Use of compressed air

It is advisable to wear protection goggles and a mask.

- Restart the truck in accordance with the instructions.



NOTE

If, despite taking precautions, traces of moisture remain in the motor, dry it using compressed air. After having eliminated any traces of moisture, the truck may be reactivated. Do not do so before then to prevent any corrosion.

General information on battery maintenance

DANGER

Risk of injury

Before carrying out any operations on the electric installation, turn the truck power supply off. Disconnect the battery connector.

Precautions to be taken during battery maintenance

The plugs on the battery cells must always be dry and clean.

Neutralise any spilt battery acid immediately.

The battery terminals and lugs must be clean, lightly covered with grease for terminals and securely tightened.

Charging the battery

During the charging process, the surface of the battery cells must be clear to ensure sufficient ventilation.

Do not place metal objects on the battery.

The battery cover must remain open during charging. See the chapter entitled **Battery charging using an external charger**.

Battery type

Lead or gel batteries are used. It is advisable to choose a compatible charger.

Before charging, ensure that the charger is suitable for the type of battery.

CAUTION

Gel batteries are subject to specific charging, maintenance and treatment instructions. A non-compatible charger may result in a battery failure.

Observe the manufacturer's recommendations.



NOTE

- *The discharge indicators used to check the battery must also be suitable for the type of battery*
- *Contact the relevant After-Sales Service Centre*

Charging the battery

- Park the truck in an area without condensation or pollution and with sufficient ventilation.
- Stop the truck.
- Press the emergency off switch.
- Open the battery hood.
- Follow the instructions.

CAUTION

Do not expose the charger to water, rain, oils, grease or any similar substances.

The charger becomes hot during the operation.

CAUTION

Risk of injury

Do not obstruct the ventilation. Allow the charger to cool down for 10 minutes after charging is complete before touching it. Do not use the charger out of the truck.

Chassis, bodywork and fittings

Checking the condition of the forks




- Check that the forks (1) show no signs of deformation, splits, heavy wear or cracks.

⚠ CAUTION

Truck damage

If the carriage is damaged, have it changed by the After-Sales Service Centre.

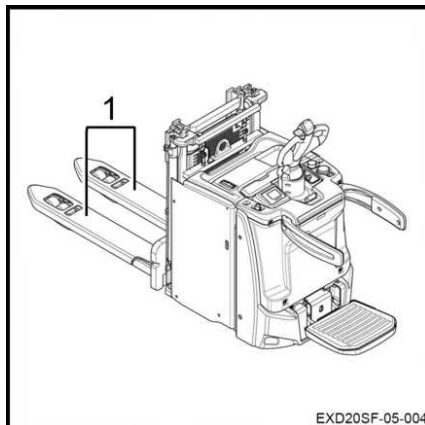


Steering and wheels

Cleaning the pinion gear of the steering geared motor



- Immobilise the truck.
- Lower the load arms.
- Switch off the ignition and remove the key.
- Press in the emergency off switch.
- Open the battery hood.
- Disconnect the battery connector.
- Remove the hood of the technical compartment.
- Check that the pinion gear and the ring gear (1) are free from dirt.
- Clean with solvent if necessary, then dry with compressed air.

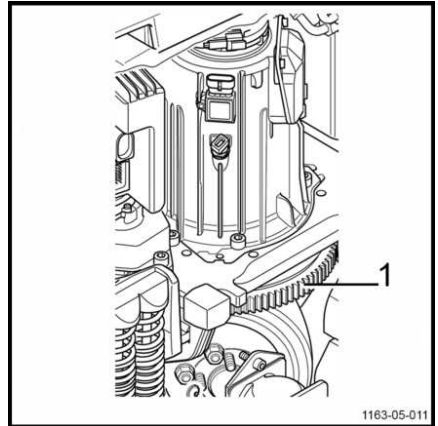

CAUTION

Use of compressed air

It is advisable to wear protection goggles and a mask.

- Then lubricate the pinion and ring gear with silicone aerosol spray.
- Reconnect the battery connector.
- Return the truck to service.

CAUTION

Risk of dust clogging

There is a risk of dust clogging if non-recommended products are used for greasing.

CAUTION

Risk of injury

It is advisable to wear gloves when carrying out maintenance on the pinion and the turntable.

Steering and wheels


Checking the condition of the wheels

- Raise the truck until the wheels are off the ground.
- Check that the wheels rotate freely and remove any objects that may obstruct them or prevent them from turning.

⚠ CAUTION

Risk of damaging the wheels

In order to avoid any risk of damaging the wheel bearings and tyres, any wires or plastic strips that may wind around the wheel hubs and mountings must be removed.

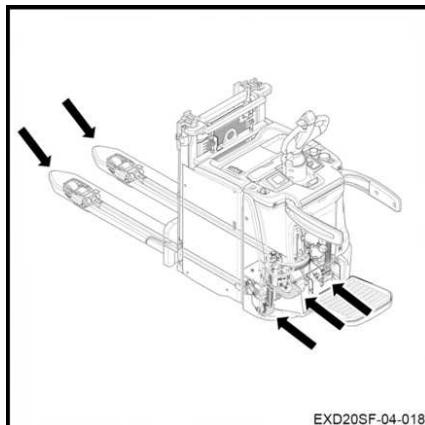

Stabiliser maintenance

Trucks are equipped with two stabilisers. They ensure the dynamic stability of the truck. Different types of stabilisers are available as options.

Stabilisers do not require any specific maintenance or adjustment work. Wheel wear (drive wheel and stabiliser wheel) is automatically compensated.

However, it is necessary to check the condition of the stabilisers:

- No significant damage to the superstructure.
- The damper cylinder pins must not be twisted.
- No oil leakage must be present on the damper cylinder. This cylinder must be inside the spiral spring.
- No damage to the rollers. The wheels must rotate freely
- No locking at the level of the upper bearing.
- Ensure that the wheel nuts are correctly tightened.
- Ensure that there is no oil leakage under the truck when it is fitted with hydraulic stabilisers.

⚠ WARNING

Risk of loss of dynamic stability

The dynamic behaviour of the device must be monitored, particularly when turning. The behaviour of the truck must be the same when cornering, whether turning to the left or right. If there is a difference in behaviour, please contact the After-Sales Service Centre. Only the technician can replace the two stabilisers if deemed necessary.



NOTE

It is necessary to monitor the wear of the wheels in order to preserve the traction of the truck.

Electrical equipment

Cleaning and blowing air through the electrical components

⚠ CAUTION

Electrical hazards

Always disconnect the battery connector before working on an electrical component.


- Press the emergency off switch.
- Disconnect the battery connector.
- Open the technical compartment.
- Blow the electrical components with compressed air.

⚠ WARNING

Use of compressed air

It is advisable to wear protection goggles and a mask.

- Check the condition of the harness connector pins.

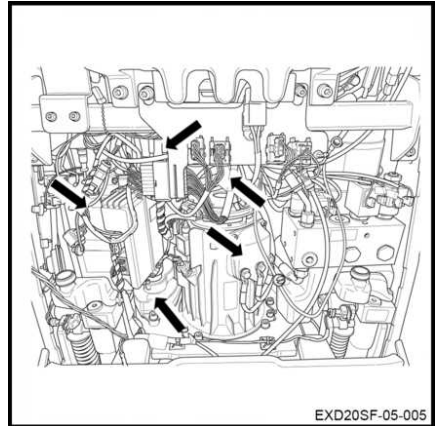

EXD20SF-05-005

Electrical equipment

Checking the battery acid level and electrolyte density ▷

⚠ WARNING

The electrolyte (diluted sulphuric acid) is poisonous and caustic!


- Always wear suitable protective equipment (industrial goggles, safety gloves) when working on a battery.
- Never wear a watch or jewellery when handling battery acid.
- Do not allow any acid to get onto the clothing or skin or into the eyes. If this does happen, rinse immediately with plenty of clean water.
- Immediately rinse away any spilled battery acid with plenty of water.
- In case of injury, seek medical advice immediately.
- Always follow the safety information provided by the battery manufacturer.
- Comply with the regulations in force.

- Check the battery acid level and electrolyte density according to the battery manufacturer's recommendations.
- The cell covers of the battery must be kept dry and clean.
- Any spillage of battery acid must be neutralised immediately.



ENVIRONMENT NOTE

Dispose of any used battery acid in accordance with the regulations.

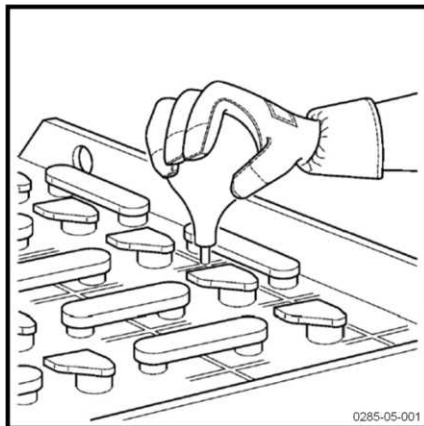


Checking the condition of the cables, terminals and battery connector ▷

- Check that the cable insulation is undamaged.
- Check that there are no signs of heat build-up in the connections.
- Check that the "+" and "-" output terminals are not sulphated (presence of white salt).
- Check the condition of the battery connector contacts and the presence of the keying pin.

⚠ CAUTION

Risk of damaging the equipment

The points mentioned above can cause serious incidents. In the event of an incident, contact our After-Sales Service Centre as quickly as possible.

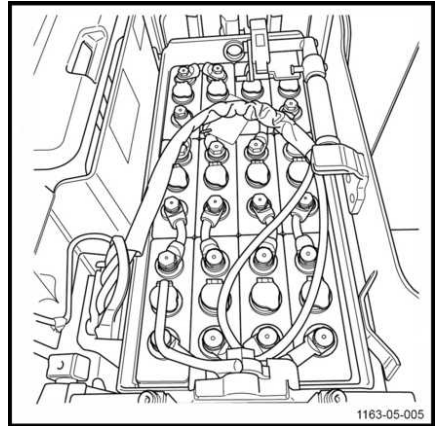


Hydraulic systems

Hydraulic systems

Checking the hydraulic system for leaks ▷

- Switch off the truck and disconnect the battery connector.
- Remove the hood of the technical compartment.
- Inspect the hydraulic system: pipes, hoses and connections between the pump unit and the cylinders.
- Check the cylinders for leaks.
- Check that the hoses are attached correctly and show no signs of friction wear.
- Check the external pipes and hoses on the technical compartment.
- Refit the hood of the technical compartment.
- Return the truck to service.

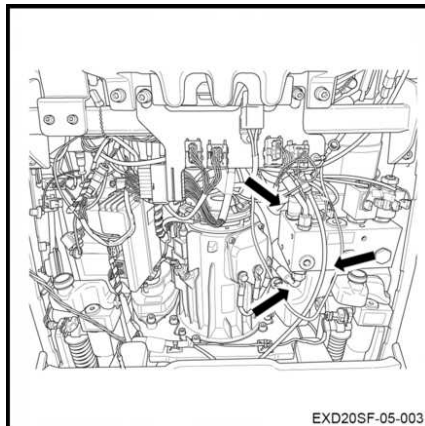**⚠ CAUTION**

Risk of damaging the truck

In the event of leakage, please contact the After-Sales Service Centre.

Checking the hydraulic oil level

To check the hydraulic oil level, proceed as follows:

- Immobilise the truck.
- Lower the forks.
- Switch off the ignition and remove the key.
- Press in the emergency off switch.
- Disconnect the battery connector.

- Remove the hood of the technical compartment. ▷


To ensure correct operation of the truck functions, the oil level must be between the minimum mark (3) and maximum mark (2) on the tank.

- Remove the plug (1). If necessary, top up via the opening.
- Refit the plug (1) afterwards.

⚠ CAUTION

Risk of damage to hydraulic components


Only use hydraulic oil that complies with the manufacturer's specifications (see table of recommended lubricants).

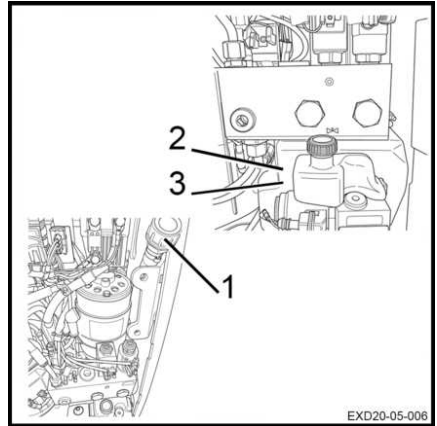

- Refit the hood of the technical compartment.
- Reconnect the battery connector.
- Return the truck to service.

Checking the controlled stabiliser hydraulic system for leaks ▷

- Switch off the truck and disconnect the battery connector.
- Remove the hood of the technical compartment.
- Inspect the stabiliser hydraulic system:
 - Tank
 - Rigid pipes
 - Connections from the stabiliser directional control valve block to the cylinders
- Check the tank for leaks.
- Tighten the swivel joints on the cylinders if necessary.
- Check the cylinders for leaks.
- Check that the rigid pipes are attached correctly and show no signs of friction wear.
- Refit the hood of the technical compartment.
- Return the truck to service.

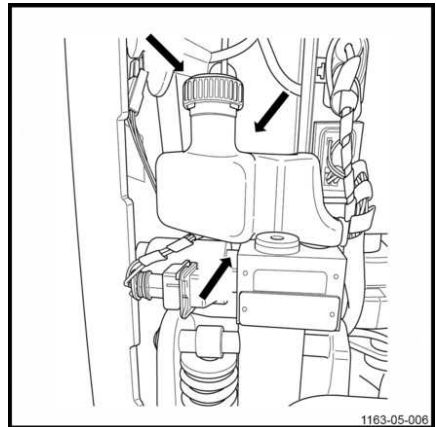

Hydraulic systems


In the event of leakage, please contact the After-Sales Service Centre.

Checking the oil level in the controlled stabiliser circuit ▷

- Switch off the truck and disconnect the battery connector.
- Remove the hood of the technical compartment.

It is essential that the oil level of the stabilisers is on the mark situated between the raised MIN and MAX (3) lettering on the tank (2)

- Top up the level if necessary, after unscrewing the plug (1).
- Screw the plug back in at the end of the operation.

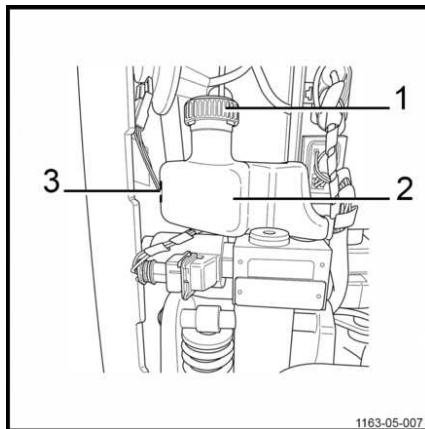

⚠ CAUTION

Risk of damage to the truck

Only use hydraulic oil that complies with the specifications. See table of lubricants.

- Refit the hood of the technical compartment.
- Return the truck to service.

Lift mast

Cleaning and lubricating the chains



NOTE

If the lifting chain is too dirty, clean it.

- Place a recipient underneath the lifting chain.
- Clean using a paraffin-based product (petroleum, fuel oil etc.). Observe the manufacturer's safety guidelines.
- If using a steam jet, do not use additives.
- Immediately dry the chain and its joints with compressed air. Move the chain frequently during this operation.
- Lubricate the chain immediately using a special aerosol chain lubricant.



CAUTION

Risk of the equipment becoming worn or damaged.

Chains are safety components. Use of cold cleaning agents, chemical products, acid or chlorinated products could destroy the chains.



NOTE

Use of high pressure liquid cleaning devices is not advisable.



DANGER

Danger of death and/or risk of serious damage to equipment

On trucks fitted with macrolon mast protection, clean the translucent screen thoroughly after lubrication operations.

Adjusting the length of the mast chains



NOTE

Depending on the use of the truck, the chains are liable to stretch and as a result they have to be adjusted regularly.


Lift mast

- Fully lower the mast.
- Undo the locknut (2)
- Place the chains under slight tension by tightening the nut (1).
- Retighten the locknut (2).

⚠ CAUTION

Risk of the equipment becoming worn or damaged.

After this adjustment, check that the fork carriage does not reach the mechanical stop at the top of the mast during the maximum lift. If this is the case, slacken or replace the chains. We recommend that this operation be carried out by our After-Sales Service Centre.

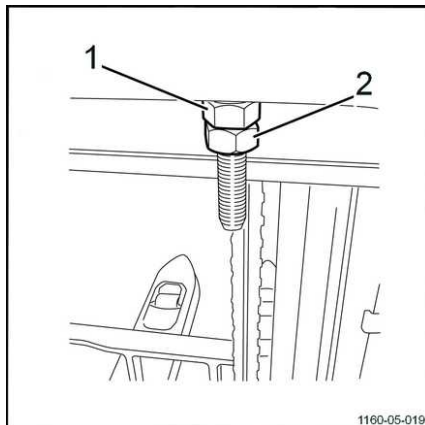

Checking the protective screen




It is important to check the condition of the mast protective screens and to check that the mountings are tightened.

- Check that the protective screen (1) is correctly attached and in good condition (undamaged).
- Replace the protective screen if it is damaged.
- Adhere to the number of mountings defined by the manufacturer.

⚠ WARNING

Risk of serious injury and/or serious damage to equipment

Never touch moving parts and assemblies without first having lowered the equipment to the ground and disconnected the battery.

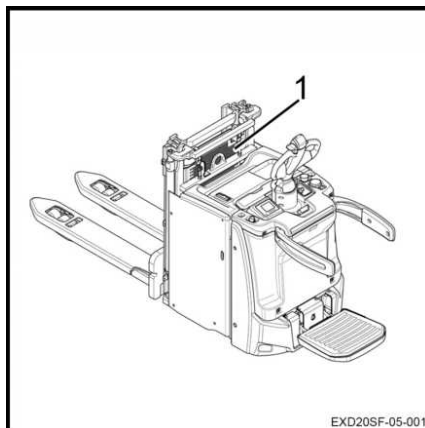

⚠ DANGER

Poor visibility

The screen must be installed and correctly attached.

Do not attach anything to the screen that could affect the visibility of the forks.

When cleaning the fork side, only clean the screen when the forks are in the lowered position.

Storage and decommissioning

Storage of truck

Precautions should be taken if the truck must not be used for a reasonably long period. The operations depend on the length of time it is unused.

Long-term truck storage

The following work must be carried out on the truck to prevent corrosion if it needs to be stored for a long period of time. If the truck is to be stored for more than two months, it must be positioned in a clean and dry area. The area must be well-ventilated with no risk of freezing.

The following operations must be performed:

- Clean the truck thoroughly.
- Check the hydraulic oil level and refill if necessary.
- Lower the forks onto a suitable support (e.g. a pallet) until the chains are slack.
- Coat any unpainted metal parts with a thin layer of oil or grease.
- Grease all hinges and joints.
- Check battery condition and electrolyte density. Maintain the battery in accordance with the manufacturer's requirements. (Follow the instructions).
- Spray contacts with an aerosol product designed for contacts.
- Raise and chock the truck: the wheels must not touch the ground in order to prevent irreversible deformation of the tyres.
- Cover the truck with a cotton cover to protect it from dust.

CAUTION

We recommend that you do not use a plastic sheet as this encourages condensation to form.

Consult the service department for further measures to take if the truck must be stored for a longer period of time.

Recommissioning after storage

If the truck has been stored for more than six months, it must be checked carefully before being recommissioned. This check is similar to the workplace accident prevention inspection. It is therefore necessary to check all points and systems that are important for truck safety.

Carry out the following operations:

- Clean the truck thoroughly.
- Grease all hinges and joints.
- Check the condition and density of electrolyte, and, if necessary, recharge the battery.
- Check that there are no traces of condensation water in the hydraulic oil. Drain if necessary.
- Carry out the same maintenance work as for the first time it was commissioned.
- Commission the truck.
- In particular, check the following during start-up:
 - traction, control and steering.
 - brakes (service brake and parking brake).
 - lifting device.

Storage and decommissioning

Permanent Putting Out of Commission (Destruction)

When scrapping the truck, it is necessary to:

- Remove the various parts of the truck (covers, battery, chains, motors etc.)
- Sort out the components depending on their type: pipes, rubber components, lubricants, aluminium, iron etc.
- Before scrapping the truck, notify the competent authorities of your country in writing.
- After receiving the authorisation from the competent authorities, remove any components according to national standards.




NOTE

The client is solely responsible for any irregularities he has committed during or after the scrapping of the truck's components and the removal of components.

Technical specifications

EXD-SF 20 datasheet

EXD-SF 20 datasheet

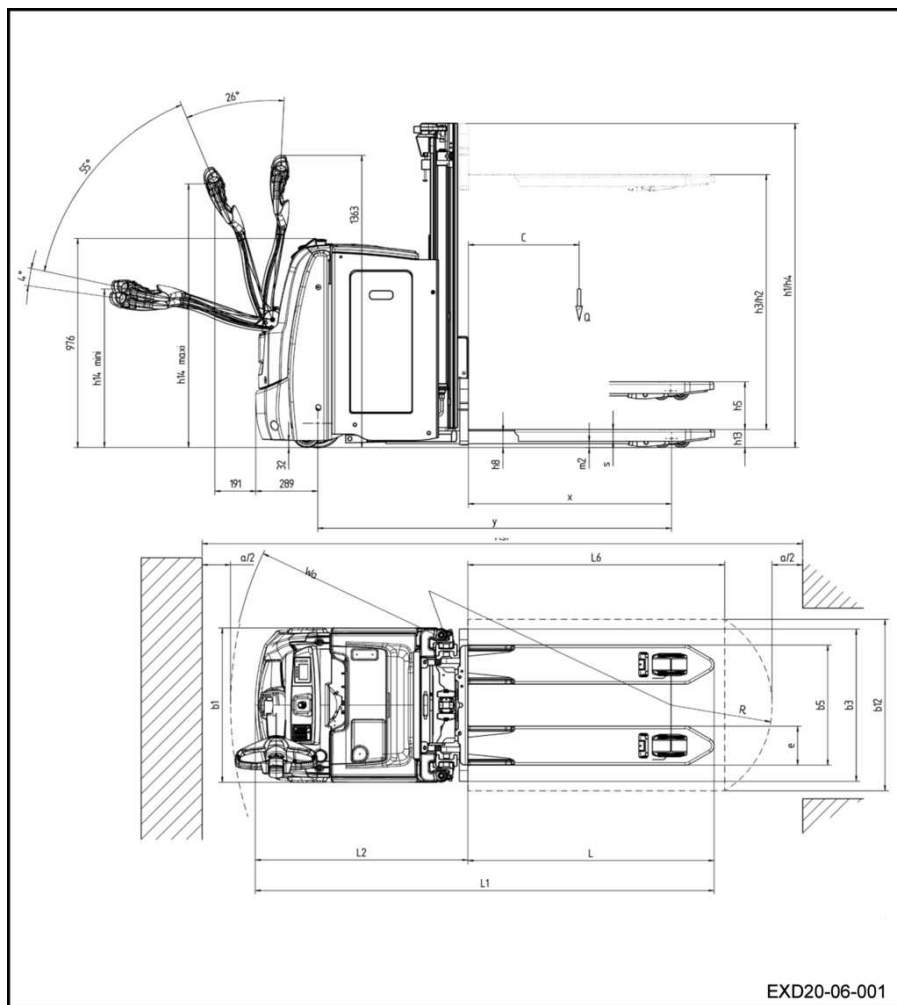

DESCRIPTION			
1.1	Manufacturer		STILL
1.2	Model type		EXD-SF 20
1.3	Drive type: battery, diesel, petrol, LPG, mains power		Battery
1.4	Driving mode: manual, pedestrian, standing, seated, order picking		Standing
1.5	Nominal capacity: main lift only Main lift/initial lift Initial lift only	Q (kg)	0; 1000/1000; 2000
1.6	Centre of gravity	C (mm)	600
1.8	Distance from load wheel axle to load support face (±5 mm)	X	922
1.9	Wheelbase (±5 mm)	Y	1679

WEIGHT			EXD-SF 20
2.1	Kerb weight (±10%) with battery ⁽²⁾	kg	1424
2.2	Load per laden axle, drive side/load side (±10%) Load = 2000 kg ⁽¹⁾	kg	1383/2041
2.3	Load per unladen axle, drive side/load side (±10%) ⁽¹⁾	kg	1072/352

WHEELS			EXD-SF 20
3.1	Tyre: polyurethane, rubber, drive side/load side		R + P/P
3.2	Drive wheel dimensions (width at the ground)	Ø x L (mm)	Ø230 x L90/Ø230 x L100
3.3	Wheel sizes load side	Ø x L (mm)	Ø85 x L85 (bogies: Ø85 x L60)
3.4	Additional wheels (dimensions)	Ø x L (mm)	2 x Ø125 x L60
3.5	Number of wheels drive side/load side (x = drive wheel)		1X + 2/2 (1X + 2/4)
3.6	Track width, drive side (±5 mm)	mm	502
3.7	Track width, load side (±5 mm)	mm	380

DIMENSIONS			EXD-SF 20
4.2	Lowered mast height (±5 mm)	h1 (mm)	1465 (2024T)
4.3	Free lift (±5 mm)	h2 (mm)	150 (2024T)
4.4	Lift (±5 mm)	h3 (mm)	2024 (2024T)
4.5	Extended mast height (±5 mm) ⁽⁴⁾	h4 (mm)	2544 (2024T)
4.6	Initial lift (±5 mm)	h5 (mm)	125

EXD-SF 20 datasheet

4.9.1	Height of tiller in driving position min./max. (± 5 mm)	h14 (mm)	1208/1402
4.9.1	Height of tiller in driving position for the combi tiller min./max. (± 5 mm)	h14 (mm)	1213/1458
4.10	Load arm/ground height (0/+5 mm)	h8 (mm)	80
4.15	Height at the ends of the fork in the lowered position (0/+5 mm)	h13 (mm)	86
4.19	Total length (+5 mm)	L1 (mm)	2145
4.20	Length to load support (± 5 mm)	L2 (mm)	995
4.21	Total width (± 5 mm)	b1 (mm)	720
4.22	Fork dimensions	s/e/L (mm)	50/180/1150
4.23	Load arm dimensions	s/e/L (mm)	75/150/1115
4.24	Fork carriage width (± 5 mm)	b3 (mm)	710
4.25	Fork arm external spread (± 5 mm)	b5 (mm)	540/560
4.26	Inside load arm spread (± 5 mm)	b4 (mm)	210/230
4.32	Ground clearance at centre of wheelbase (± 2 mm)	m2 (mm)	20
4.33	Load dimension b12 x L6	b12 x L6	800 x 1200
4.34	Aisle width with predetermined load	Ast (mm)	3095 ⁽³⁾
4.34. 2	Aisle width with a pallet 800 x 1200 crosswise	Ast (mm)	2913 ⁽³⁾
4.35	Turning radius (minimum)	Wa (mm)	2407

PERFORMANCE DATA			EXD-SF 20
5.1	Travel speed when laden/unladen ($\pm 5\%$)	km/h	10/10
5.2	Initial lifting speed when laden/unladen ($\pm 10\%$)	m/s	0.050/0.061
	Main lifting speed when laden/unladen ($\pm 10\%$)	m/s	0.14/0.22
5.3	Initial lowering speed when laden/unladen ($\pm 10\%$)	m/s	0.102/0.082

	Main lowering speed when laden/unladen ($\pm 10\%$)	m/s	0.488/0.197
5.8	Maximum gradient (0 kg, 1200 kg, 2000 kg)	%	20/15/12
5.9	Acceleration time (10 m) when laden/unladen	s	7.6/6.7
5.10	Service brake		electromagnetic

DRIVE SYSTEM			EXD-SF 20
6.1	Traction motor, S2: 60 minutes	kW	2.3
6.2	Lift motor, S3: at 10% utilisation	kW	2.2
6.3	Battery type in accordance with DIN 43 535		3 PzS side access
6.4	Battery voltage and capacity (discharge in 5 hours)	V/Ah	Gel/lead battery
			24/375
			3 PzS - side access Li-ion 205 Ah
6.5	Battery weight ($\pm 10\%$)	(kg)	23/205
			3 PzS - side access Li-ion 205 Ah
			23/410
6.5	Battery weight with case ($\pm 10\%$)	(kg)	Gel/lead battery
			290
			3 PzS - side access Li-ion 205 Ah
6.5	Battery weight with case ($\pm 10\%$)	(kg)	190
			3 PzS - side access Li-ion 205 Ah
			229
6.6	Energy consumption according to standardised VDI cycle	kWh/h	0.483
6.7	Turnover output	T/h	59
6.8	Energy consumption at turnover output	kWh/h	1.5

MISCELLANEOUS			EXD-SF 20
8.1	Speed monitor (AC controller)		LAC
10.7	Noise level at forklift operator's ears (± 2.5)	dB (A)	67

1) Weight according to line 2.1

2) With battery line 6.5

3) $A_{st} = W_a + R + a$ (pallet stacker)

Safety distance $a = 200$ mm

EXD-SF 20 mast types

EXD-SF 20 mast types

Mast type	Standard			
	1574T	1724T	2024T	2424T
h1	1240	1315	1465	1665
h1'	1315	1390	1540	1740
h2	150	150	150	150
h3	1574	1724	2024	2424
h4	2094	2244	2544	2944

Mast type	Duplex		Triplex
	2424N	2924N	2136S
h1	1165	1915	1165
h1'	/	/	/
h2	1145	1395	645
h3	2424	2924	2136
h4	2944	3444	2662

Eco-design requirements for electric motors and variable speed drives

All motors in this industrial truck are exempt from Regulation (EU) 2019/1781 because these motors do not meet the description given in Article 2 "Scope", Item (1) (a) and because of the provisions in Article 2 (2) (h) "Motors in cordless or battery-operated equipment" and Article 2 (2) (o) "Motors designed specifically for the traction of electric vehicles".

All variable speed drives in this industrial truck are exempt from Regulation (EU) 2019/1781 because these variable speed drives do not meet the description given in Article 2 "Scope", Item (1) (b).

A

Accessing the technical compartment. . .	117
Address of manufacturer.	I
Adjusting the length of the mast chains. .	133
Aerosol can for chains.	115
Anti-crush safety device	
Checking.	41
Description of the function.	41

B

Batteries.	36
Battery	
Closing the battery hood.	88
Opening the battery hood.	88
Type.	87
Battery acid.	16
Battery charging indicator.	28
Before leaving the machine.	82
Before leaving the truck.	79, 86
Before picking up a load.	76
Brake	
Checking the brake.	42
Braking.	36, 53
Braking by releasing the drive switch. . .	54
Braking by reversing the drive direction. .	54

C

Changing the side access battery: system	
1.	95
Changing the side access battery: system	
2.	101
Changing the vertical access battery. . . .	95
Charging the battery.	123
Charging the battery using an external charger.	89
Checking the anti-crush safety device. . .	41
Checking the battery acid level and electrolyte density.	128
Checking the cables, terminals and battery connector.	129
Checking the condition of the forks. . . .	124
Checking the controlled stabiliser hydraulic system for leaks.	131
Checking the emergency shutdown.	42
Checking the horn.	43
Checking the oil level in the controlled stabiliser circuit.	132
Checking the protective screen.	134

Checks prior to start-up.	38
Cleaning and lubricating the chains. . . .	133
Cleaning the truck.	121
Climatic conditions.	11
cold store.	84
Cold store usage.	84
Combi tiller.	58
Conformity marking.	3
Consumables.	15
Battery acid safety instructions.	16
Disposal.	17
Oil Safety Information.	15
Safety information for handling hydraulic fluid.	16
Contact details.	I
Copyright and property rights.	2

D

Declaration of conformity.	4
Defining directions.	52
Description of the Dynamic Drive Control. .	83
Description of use.	11
Destruction.	136
Display-operating unit.	27
Display unit	
Activity indicator.	48
Drive program.	48
Error codes menu.	49
Operator presence.	47
Settings.	47
Start-up screen.	50
Temperature.	47
Warnings.	47
Disposing of components and batteries. . .	12
Drive program	
Blue Q mode.	56
Hare mode.	55
Tortoise mode.	56
Driver rights, duties and rules of behaviour. .	20
Drivers.	20
Driver's compartment.	26, 37
Drive system.	36
Driving.	52
Driving on loading bridges.	110
Driving safety guidelines.	51

E		
EC declaration of conformity in accordance with the Machinery Directive.	4	
Electrical equipment		
Cleaning and blowing air through the components.	127	
Electromagnetic braking.	54	
Electronic key (option).	30	
Emergency lowering.	105	
EXD-SF 20.	138	
EXD-SF 20 mast types.	142	
F		
Features.	36	
FleetManager™		
Colour code for the LEDs.	65	
Commissioning a truck equipped with a keypad or an electronic key.	64	
Commissioning a truck equipped with an RFID reading device.	64	
Description.	63	
Disconnecting a truck equipped with a keypad or electronic key.	67	
Disconnecting a truck equipped with an RFID reading device.	68	
Disconnecting the truck.	67	
Start-up.	64	
G		
General.	2, 112	
General information on battery maintenance.	123	
General view of the truck.	24	
Grade and quantity of lubricants and other consumables.	112	
H		
Handling a single load.	76	
Handling two stacked pallets.	80	
Horn.	55	
Hydraulic fluid.	16	
Hydraulic system		
Checking the hydraulic oil level.	130	
Checking the hydraulic system for leaks.	130	
I		
Identification label.	6	
Initial Lift.	75	
L		
Labels.	32	
Lift control elements.	74	
Lifting the truck.	109	
List of abbreviations.	7	
Load handling safety rules.	70	
M		
Maintenance plan.	112	
5000 hours.	120	
Managing battery charging.	46	
Masts.	36	
Multi-purpose grease.	115	
N		
Noise emission values.	18	
O		
Oils.	15	
On-board charger		
Adjusting the on-board charger.	94	
Charging curve selector.	94	
Using the on-board charger.	92	
Operating company.	20	
Ordering spare parts and consumables.	113	
Order picking.	87	
P		
Pedestrian driving.	58	
Permanent Putting Out of Commission.	136	
Picking up a load at a height.	79	
Picking up a load from the ground.	77	
Picking up two loads.	80	
Precautions to be taken during battery maintenance.	123	
Progressive stopping of the carriage in the lower position.	73	
Prohibition of use by unauthorised persons.	21	
Proper usage.	11	
R		
Raising/lowering the mast.	75	
Reading the capacity plate.	72	
Recommended lubricants.	115	
Residual dangers, residual risks.	19	
Ride-on driving.	56	

S

Safety devices.	114
Safety Inspection.	22
Selection buttons.	46
Serial number.	33
Service plan	
1000 hours.	119
10,000 hours.	120
Servicing and maintenance measures. .	114
Setting a load down on the ground.	77
Setting down two loads.	81
Settings menu.	49
Slinging the truck.	108
Spare parts list.	10
Specialist.	20
Stabiliser maintenance.	126
Stability.	19
Stacking a load.	78
Starting on a ramp.	62
Starting up.	39
Steering.	36
Steering geared motor	
Cleaning the pinion gear of the steering geared motor.	125
Symbols used.	12

T

Technical compartment.	25
-----------------------------	----

Technical data for inspection and maintenance.	116
Technical description.	36
Transporting a load.	77
Transporting the truck.	109
Transporting the truck in the lift.	110
Transporting two loads.	81
Travelling down slopes.	61
Travelling up slopes.	61
Truck operating instructions.	44

U

Unauthorised use.	12
Using the on-board compressor option. .	69
Using the truck on a ramp.	60

V

Vibrations	
Vibration characteristics for vibrations to which the body is exposed.	18

W

Wheels	
Checking the condition of the wheels. .	126
Working on the electrical equipment. . .	114

